RCA

GE

PROSCAN

THOMSON CONSUMER ELECTRONICS

98

March

Remote Controls

REMOTE CONTROLS

for RCA, GE and ProScan® Instruments

This publication is divided into four sections:

The first section is a listing in model number sequence showing the stock number that should be used to order a replacement remote control. Also shown is the type of instrument with which the remote control is used and the page number on which you will find a photo of the remote.

The second section lists the remote controls in stock number sequence along with the instrument type in which it is used and the page number where you will find a photograph of the remote.

The third section consists of photographs of each of the controls. These photographs may be helpful in identifying the correct remote required. The type number and stock number are shown below the photograph.

The fourth section lists the remote controls in type number sequence with the replacement stock number, the instrument type in which it is used, and the page number on which you will find a photo of the remote.

NOTE: Many of the remote controls included here are also included in the Thomson Exchange Program. The controls eligible for return dud credit are listed by stock number in publication 1F4163, "Parts Eligible for Dud Return Allowance."

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
09GP109	226725	TV	55
09GP110	231032	TV	57
11-2004B	58A20967	AUDIO	43
11-2010A	54002	AUDIO	43
11-4022	54002	AUDIO	43
11-4022B	54002	AUDIO	43
11-6025A	EA58X0001	AUDIO	43
11-6027	58A15475	AUDIO	50
11-8010A	54003	AUDIO	43
11-8052A	54003	AUDIO	43
11-8060	54001	AUDIO	43
11-8100A	58A10047	AUDIO	49
11-8125B	58A21208	AUDIO	NO PIX
11-8125C	58A30616	AUDIO	51
11-8162A	225436	AUDIO	43
11-8162B	220294	AUDIO	43
11-9052A	54003	AUDIO	43
11-9100A	58A10047	AUDIO	49
13AC1542W	194330	TV	35
13AC2542W	194330	TV	35
13AC2545W	EP62X0209	TV	42
13AC3542W	EP62X0209	TV	42
13AC4542W	EP62X0209	TV	42
13AC4546W	EP62X0209	TV	42
13ACB516W	EP62X0209	TV	42
13ACB547W	EP62X0209	TV	42
13BC5540W	EP62X0209	TV	42
13BC5550W	EP62X0208	TV	42
13GP210	226098	TV	45
13GP210B	226102	TV	46
13GP210BF14	226102	TV	46
13GP211	226102	TV	46
13GP211A	226725	TV	55
13GP211A	226102	TV	46
13GP211AC15	226102	TV	46
13GP234C01	186345	TV	37
13GP234F01	186345	TV	37
13GP234F02	186345	TV	37
13GP234F03	186345	TV	37
13GP235C01	186345	TV	37
13GP235F01	186345	TV	37
13GP235F03	186345	TV	37
13GP236C01	186344	TV	37
13GP236C03	186344	TV	37
13GP236F01	186344	TV	37
13GP236F02	186344	TV	37
13GP236F03	186344	TV	37
13GP237C01	186344	TV	37
13GP237C03	186344	TV	37
13GP237F01	186344	TV	37
13GP237F03	186344	TV	37
13GP239	226102	TV	46
13GP239A	226102	TV	46
13GP240	226100	TV	46
13GP240A	226100	TV	46
13GP240AF15	226100	TV	46
13GP240C03	226107	TV	46
13GP240F03	226107	TV	46
13GP241	226725	TV	55
13GP243	231032	TV	57
13GP300	230766	TV	57
13GP410F01	173916	TV	36
13GP411F01	173916	TV	36
13GP413F01	173916	TV	36
13GP415F01	182727	TV	36
13GP430F01	186345	TV	37
13GP430F02	186345	TV	37
13GP431C01	186344	TV	37
13GP431F01	186344	TV	37
13GP431F02	186344	TV	37
13GP433C01	186345	TV	37
13GP433C02	186345	TV	37
13PF6545	211829	TV	43
13PP5555W	EP62X0208	TV	42
13TVR01	216777	TV/VCR	51
13TVR03	225760	TV/VCR	52
13TVR40	221189	TV/VCR	53
13TVR60	231536	TV/VCR	56
13TVR70	232347	TV/VCR	56
13TVR90	231536	TV/VCR	56
14269N01	197944	TV	38
17AC1642W	194330	TV	35
17AC2642W	194330	TV	35
17AC3642W	EP62X0209	TV	42
17BC4642W	EP62X0209	TV	42
17BC5652W	EP62X0208	TV	42
17BC5654W	EP62X0208	TV	42
17PF5670	EP62X0204	TV	42
19CC6749	EP62X0209	TV	42
19CC6751	EP62X0204	TV	42
19CC6753	EP62X0204	TV	42
19CH6743	EP62X0209	TV	42
19CP6770	EP62X0204	TV	42
19CP6780	EP62X0200	TV	35
19EC0770W	194324	TV	35
19EC0772K	194324	TV	35
19EC0776K	194324	TV	35
19EC1742W	194330	TV	35
19EC1754W	194324	TV	35
19EC1756K	194324	TV	35
19EC2742W	194330	TV	35
19EC2754W	194324	TV	35
19EC2756K	194324	TV	35
19EC3754W	EP62X0208	TV	42
19EC3756K	EP62X0208	TV	42
19ECK743W	194330	TV	35

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
19ECK746W	194330	TV	35
19GT300	230766	TV	57
19GT310	226098	TV	45
19GT310FA1	226098	TV	45
19GT310JX1	226098	TV	45
19GT311	226098	TV	45
19GT311B	226725	TV	55
19GT311B	226102	TV	46
19GT311BTX1	226725	TV	55
19GT311BTX2	226725	TV	55
19GT311TX1	226098	TV	45
19GT312	226102	TV	46
19GT312FA1	226102	TV	46
19GT312TX1	226102	TV	46
19GT312TX2	226725	TV	55
19GT313	226102	TV	46
19GT313CTX2	226725	TV	55
19GT313TX1	226109	TV	45
19GT313TX2	226109	TV	45
19GT317	226725	TV	55
19GT319	226725	TV	55
19GT351	226102	TV	46
19GT351FA1	226102	TV	46
19GT351JX1	226102	TV	46
19GT352	226102	TV	46
19GT352TX1	226102	TV	46
19GT352TX2	226725	TV	55
19GT354	226102	TV	46
19GT354TX1	226102	TV	46
19GT354TX2	226725	TV	55
19GT356	226725	TV	55
19GT357	226725	TV	55
19GT363	226100	TV	46
19GT366TX1	233068	TV	56
19GX310N01	173916	TV	36
19PC2742W	194330	TV	35
19PC2745W	EP62X0209	TV	42
19PC3742W	EP62X0209	TV	42
19PC3744W	EP62X0209	TV	42
19PC3754W	EP62X0208	TV	42
19PC4738W	EP62X0209	TV	42
19PC5750W	EP62X0208	TV	42
19PC5752W	EP62X0208	TV	42
19PC5754W	EP62X0204	TV	42
19PC5762W	EP62X0208	TV	42
19PC5763W	EP62X0208	TV	42
19PC6755	EP62X0208	TV	42
19PCC754W	EP62X0204	TV	42
19PCH743B	EP62X0209	TV	42
19PCP752J	EP62X0235	TV	42
19PCU752W	EP62X0208	TV	42
19PF3742	EP62X0209	TV	42
19PF5752	EP62X0208	TV	42

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
19PF6740	EP62X0209	TV	42
19PF6741	EP62X0209	TV	42
19PF6744	EP62X0209	TV	42
19PF6752	EP62X0208	TV	42
19PF6754	EP62X0204	TV	42
19PF6755	EP62X0208	TV	42
19PF6756	EP62X0204	TV	42
19PF6757	EP62X0204	TV	42
19PFU740	EP62X0209	TV	42
19PFU752	EP62X0208	TV	42
19PM4746W	EP62X0209	TV	42
19PM4754W	EP62X0208	TV	42
19PM4756W	EP62X0208	TV	42
19PM4758K	EP62X0208	TV	42
19PM4758W	EP62X0204	TV	42
19PM4760K	EP62X0204	TV	42
19PM4762K	EP62X0204	TV	42
19PM5765W	EP62X0204	TV	42
19PM5780K	EP62X0200	TV	35
19PM5785K	EP62X0200	TV	35
19PMB746W	EP62X0209	TV	42
19PMB754W	EP62X0208	TV	42
19PMB756W	EP62X0208	TV	42
19PMB760K	EP62X0204	TV	42
19PMB762K	EP62X0204	TV	42
19PMP769WC	EP62X0200	TV	35
19PP5762W	EP62X0208	TV	42
19PP5763W	EP62X0208	TV	42
19PP5764K	EP62X0204	TV	42
19PP5785K	EP62X0200	TV	35
19PP5780K	EP62X0200	TV	35
19TVR01	225760	TV/VCR	52
1VCR5002X	EW62X0051	VCR	50
1VCR5003X	EW62X0051	VCR	50
1VCR5004	EW62X0051	VCR	50
20GH100F	210491	TV	37
20GH110F	210491	TV	37
20GH150	224412	TV	55
20GH150FB1	227834	TV	54
20GH150JX1	227834	TV	54
20GH155	224412	TV	55
20GH200N	210491	TV	37
20GH250	224412	TV	55
20GH300N	210492	TV	37
20GH350	224413	TV	55
20GH350FB1	218713	TV	46
20GH350JX1	227835	TV	54
20GH420N02	194584	TV	37
20GH420N02	198537	TV	37
20GH420N04	194584	TV	37
20GH420N04	198537	TV	37
20GH421N04	194584	TV	37
20GH421N04	198536	TV	37

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
20GH421N04	198537	TV	37
20GH425N04	194584	TV	37
20GH425N04	198537	TV	37
20GT046N02	182727	TV	36
20GT046N04	182727	TV	36
20GT320	226102	TV	46
20GT320FA1	226102	TV	46
20GT320TX1	226102	TV	46
20GT320TX2	226725	TV	55
20GT322	226102	TV	46
20GT324	226100	TV	46
20GT324JX2	226725	TV	55
20GT324TX2	226725	TV	55
20GT360FB1	204960	TV	37
20GT361	226102	TV	46
20GT370FB1	187803	TV	37
20GT370NB1	187803	TV	37
20GT372	211687	TV	45
20GT372FB1	211687	TV	45
20GT372NB1	211687	TV	45
20GT373	226100	TV	46
20GT373FB1	226100	TV	46
20GT373FB2	226100	TV	46
20GT373JX1	226100	TV	46
20GT373JX2	226100	TV	46
20GT374	221109	TV	56
20GT374FB1	228004	TV	56
20GT374FB2	228004	TV	56
20GT374JU2	228004	TV	56
20GT374JX1	228004	TV	56
20GT374JX2	228004	TV	56
20GT375	221109	TV	56
20GT375FB1	221109	TV	56
20GT375JX1	221109	TV	56
20GT377	221110	TV	56
20GT406A02	182727	TV	36
20GT406A04	182727	TV	36
20GT406AFA2	204960	TV	37
20GT406ANA2	204960	TV	37
20GT420A01	186345	TV	37
20GT420A02	186345	TV	37
20GT420A03	186345	TV	37
20GT420A04	186345	TV	37
20GT420N01	186345	TV	37
20GT420N02	186345	TV	37
20GT420N03	186345	TV	37
20GT420N04	186345	TV	37
20GT421A01	186344	TV	37
20GT421A02	186344	TV	37
20GT421A04	186344	TV	37
20GT421N01	186344	TV	37
20GT421N02	186344	TV	37
20GT421N03	186344	TV	37
20GT421N04	186344	TV	37
20GT423A01	186345	TV	37
20GT423N01	186345	TV	37
20GT425A04	186344	TV	37
20GT425N02	186344	TV	37
20GT425N04	186344	TV	37
20GT500	226102	TV	46
20GT600F01	182727	TV	36
20GT600N01	182727	TV	36
20GT602F01	186344	TV	37
20GT603F01	186345	TV	37
20GT604F01	186344	TV	37
20GT604N01	186344	TV	37
20GT605F01	186344	TV	37
20GT606F01	187803	TV	37
20GT610F01	186343	TV	37
20GT610N01	186343	TV	37
20GT612F01	187803	TV	37
20GT612N01	187803	TV	37
20XT9006N02	250097	TV	37
25CG710	226102	TV	46
25CP6859	EP62X0204	TV	42
25EM1840P	194330	TV	35
25EM1842P	194330	TV	35
25EM1846L	194330	TV	35
25EM1848P	194330	TV	35
25EM1850K	194324	TV	35
25EM1854P	194324	TV	35
25EM1855K	194324	TV	35
25EM1856A	194324	TV	35
25EM1858K	194324	TV	35
25EM1859K	194324	TV	35
25EM1860C	194324	TV	35
25EM1865K	194324	TV	35
25EM2840P	194330	TV	35
25EM2844P	194330	TV	35
25EM2845P	194330	TV	35
25EM2846L	194330	TV	35
25EM2847K	194330	TV	35
25EM2849P	194330	TV	35
25EM2850K	194324	TV	35
25EM2854K	194324	TV	35
25EM2855K	194324	TV	35
25EM2856L	194324	TV	35
25EM2858K	194324	TV	35
25EM2860K	194324	TV	35
25EM2865K	194324	TV	35
25EM2870P	194324	TV	35
25EM3850K	EP62X0208	TV	42
25EM3852P	EP62X0208	TV	42
25EM3854P	EP62X0208	TV	42
25EM3855K	EP62X0208	TV	42
25EM3856L	EP62X0208	TV	42

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
25EM3858K	EP62X0208	TV	42
25EM3859K	EP62X0208	TV	42
25EM3870P	EP62X0208	TV	42
25EM3875P	EP62X0208	TV	42
25EM3878P	EP62X0208	TV	42
25GC340K01	173916	TV	36
25GC341K01	173916	TV	36
25GC342K01	173916	TV	36
25GC701L01	186345	TV	37
25GC701P01	186345	TV	37
25GC703MF1	186344	TV	37
25GC710KF1	211690	TV	46
25GC711	226100	TV	46
25GC711KF1	226100	TV	46
25GC721	226100	TV	46
25GC722	221109	TV	56
25GC724L01	186344	TV	37
25GC724P01	186344	TV	37
25GC725MF1	187803	TV	37
25GC726M01	186344	TV	37
25GC729MF1	187803	TV	37
25GC731	226100	TV	46
25GC731KF1	226100	TV	46
25GC732	221110	TV	56
25GC732KF1	221109	TV	56
25GC742KF1	211687	TV	45
25GC742MF1	211687	TV	45
25GC744KF1	211687	TV	45
25GC744MF1	211687	TV	45
25GC752	221109	TV	56
25GH350	224413	TV	55
25GH350FE1	218713	TV	46
25GT320N01	173916	TV	36
25GT500FE1	226102	TV	46
25GT501F01	186345	TV	37
25GT503	226102	TV	46
25GT503TX2	231032	TV	57
25GT505FC1	186344	TV	37
25GT505NC1	186344	TV	37
25GT506	226100	TV	46
25GT506FE1	226100	TV	46
25GT506FE2	226100	TV	46
25GT506JX1	226100	TV	46
25GT506JX2	226100	TV	46
25GT506TX2	226100	TV	46
25GT507	226725	TV	55
25GT510	221110	TV	56
25GT510FE1	228004	TV	56
25GT510TX1	228004	TV	56
25GT511	226725	TV	55
25GT515	226100	TV	46
25GT515FE1	226725	TV	55
25GT515JX1	226725	TV	55
25GT515TX1	226725	TV	55
25GT516	226725	TV	55
25GT517	226725	TV	55
25GT520	226100	TV	46
25GT520FE1	226100	TV	46
25GT522	226100	TV	46
25GT533F01	186344	TV	37
25GT534FC1	187803	TV	37
25GT534NC1	187803	TV	37
25GT536	221109	TV	56
25GT536FE1	221109	TV	56
25GT536JX1	221109	TV	56
25GT537	221110	TV	56
25GT537FE1	221109	TV	56
25GT537JX1	221109	TV	56
25GT537TX1	221109	TV	56
25GT538	228004	TV	56
25GT538FE1	233068	TV	56
25GT538JX1	233068	TV	56
25GT538TX1	233068	TV	56
25GT539FE1	233068	TV	56
25GT542	221109	TV	56
25GT542FE1	221109	TV	56
25GT543	221109	TV	56
25GX309N01	173916	TV	36
25GX310N01	173916	TV	36
25PC3840K	EP62X0209	TV	42
25PC3841K	EP62X0209	TV	42
25PC3842P	EP62X0209	TV	42
25PC3844P	EP62X0209	TV	42
25PC3845K	EP62X0209	TV	42
25PC3846L	EP62X0209	TV	42
25PC3847K	EP62X0209	TV	42
25PC3848K	EP62X0209	TV	42
25PC3849P	EP62X0209	TV	42
25PC4840K	EP62X0209	TV	42
25PC4841L	EP62X0209	TV	42
25PC4842P	EP62X0209	TV	42
25PC4844P	EP62X0209	TV	42
25PC5842K	EP62X0209	TV	42
25PC5843K	EP62X0209	TV	42
25PC5846M	EP62X0209	TV	42
25PC5849K	EP62X0208	TV	42
25PC5850K	EP62X0208	TV	42
25PC5851L	EP62X0208	TV	42
25PC5852K	EP62X0208	TV	42
25PC5858P	EP62X0208	TV	42
25PF6840	EP62X0208	TV	42
25PF6841	EP62X0208	TV	42
25PF6842	EP62X0208	TV	42
25PF6843	EP62X0208	TV	42
25PF6846	EP62X0208	TV	42
25PF6849	EP62X0204	TV	42

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
25PF6850	EP62X0208	TV	42
25PF6851	EP62X0208	TV	42
25PF6852	EP62X0208	TV	42
25PF6853	EP62X0204	TV	42
25PF6854	EP62X0204	TV	42
25PF6855	EP62X0204	TV	42
25PF6856	EP62X0204	TV	42
25PF6857	EP62X0204	TV	42
25PM4850K	EP62X0208	TV	42
25PM4851L	EP62X0208	TV	42
25PM4852K	EP62X0208	TV	42
25PM4852P	EP62X0208	TV	42
25PM4853K	EP62X0204	TV	42
25PM4854L	EP62X0204	TV	42
25PM4855K	EP62X0204	TV	42
25PM4856K	EP62X0204	TV	42
25PM4857K	EP62X0204	TV	42
25PM4860K	EP62X0204	TV	42
25PM4880K	EP62X0204	TV	42
25PM4885P	EP62X0204	TV	42
25PM5859K	EP62X0204	TV	42
25PM5880	EP62X0200	TV	35
25PM5885	EP62X0200	TV	35
25PM5888P	EP62X0200	TV	35
25PM8880K	EP62X0204	TV	42
25PM8885P	EP62X0204	TV	42
25PMB850K	EP62X0208	TV	42
25PMB851L	EP62X0208	TV	42
25PMB856K	EP62X0204	TV	42
25PMB857K	EP62X0204	TV	42
25PMP887D	EP62X0232	TV	42
25PP5859K	EP62X0204	TV	42
25PP5860K	EP62X0204	TV	42
25PP5861L	EP62X0204	TV	42
25PP5862K	EP62X0204	TV	42
25PP5863K	EP62X0200	TV	35
25PP5864K	EP62X0200	TV	35
25PP5865K	EP62X0200	TV	35
25PP5870K	EP62X0200	TV	35
25PP5871L	EP62X0200	TV	35
25PP5872K	EP62X0200	TV	35
25YM0848P	194330	TV	35
25YM0849K	194324	TV	35
25YM0850P	194324	TV	35
25YM0854K	194324	TV	35
25YM0856L	194324	TV	35
25YM0858P	194324	TV	35
25YM0860C	194324	TV	35
25YM0864P	194324	TV	35
25YM0865K	194324	TV	35
25YM0867K	194324	TV	35
25YM0876L	194324	TV	35
25YM0878P	194324	TV	35
25YM0879K	194324	TV	35
25YM0880C	194324	TV	35
26CP6863	EP62X0204	TV	42
26CP6864	EP62X0204	TV	42
26CP6865	EP62X0204	TV	42
26CP6869	EP62X0204	TV	42
26CP6870	EP62X0204	TV	42
26CP6871	EP62X0204	TV	42
26CP6872	EP62X0204	TV	42
26GC400K01	186345	TV	37
26GC401K01	186345	TV	37
26GC403M01	186345	TV	37
26GC415M01	186345	TV	37
26GC460M01	186344	TV	37
26GC461M01	186344	TV	37
26GC480K01	186344	TV	37
26GC481K01	186344	TV	37
26GC482K01	186344	TV	37
26GC630M01	186344	TV	37
26GC631P01	186344	TV	37
26GC632M01	186344	TV	37
26GC640K01	186343	TV	37
26GC641C01	186343	TV	37
26GC641L01	186343	TV	37
26GC642K01	186343	TV	37
26GC660C01	187803	TV	37
26GC661C01	187803	TV	37
26GC671P01	187803	TV	37
26GC672P01	187803	TV	37
26GC728M01	187803	TV	37
26GC729P01	187803	TV	37
26GC730M01	187803	TV	37
26GC751MF1	211687	TV	45
26GT430N01	173916	TV	36
26GT440F01	186345	TV	37
26GT441F01	186344	TV	37
26GT441U01	186344	TV	37
26GT443F01	186345	TV	37
26GT540F01	187803	TV	37
26GT620F01	186343	TV	37
26GT622F01	186343	TV	37
26GT623F01	186343	TV	37
26GT623U01	186343	TV	37
26GT624F01	187803	TV	37
26GT640F01	186344	TV	37
26GT642F01	186344	TV	37
26GT642U01	186344	TV	37
26PM5881X	EP62X0200	TV	35
26PP5863K	EP62X0200	TV	35
26PP5864L	EP62X0200	TV	35
26PP5865K	EP62X0200	TV	35
26PP5870K	EP62X0200	TV	35
26PP5871L	EP62X0200	TV	35

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
26PP5872K	EP62X0200	TV	35
27GC691P01	187803	TV	37
27GC732	221110	TV	56
27GC801M01	187803	TV	37
27GC802KF1	211687	TV	45
27GC802KF2	211687	TV	45
27GC802MF1	211687	TV	45
27GC802MF2	211687	TV	45
27GC804MF1	211687	TV	45
27GC805P01	211687	TV	45
27GC901	221109	TV	56
27GC902	221110	TV	56
27GC903KF1	228004	TV	56
27GC903LF1	233067	TV	56
27GT590	226100	TV	46
27GT600FE	231032	TV	57
27GT600FE1	226725	TV	55
27GT600JX1	226725	TV	55
27GT607F01	186344	TV	37
27GT609F01	211687	TV	45
27GT610FE1	187803	TV	37
27GT612	211687	TV	45
27GT612FE1	211687	TV	45
27GT612NE1	211687	TV	45
27GT613	226100	TV	46
27GT614	221109	TV	56
27GT614FE1	221109	TV	56
27GT614JX1	221109	TV	56
27GT615	221110	TV	56
27GT615FE1	221109	TV	56
27GT615JX1	221110	TV	56
27GT616	226725	TV	55
27GT617	221109	TV	56
27GT617FE1	212687	TV	56
27GT617JX1	212687	TV	56
27GT618	221109	TV	56
27GT618FE1	221132	TV	47
27GT618FE2	221132	TV	47
27GT618JX1	221132	TV	47
27GT618JX2	228003	TV	56
27GT619	228004	TV	56
27GT619TX1	233068	TV	56
27GT620	228004	TV	56
27GT620FE1	233068	TV	56
27GT620JX1	233068	TV	56
27GT620TX1	233068	TV	56
27GT621FE1	233068	TV	56
27GT622	228003	TV	54
27GT622FE1	233067	TV	56
27GT650F01	186344	TV	37
27GT651F01	187803	TV	37
31GT100N01	197946	TV	38
31GT653N01	187803	TV	37
31GT656NM1	211687	TV	45
31GT657	221109	TV	56
31GT657FM1	221110	TV	56
31GT657JX1	221110	TV	56
31GT658	221110	TV	56
31GT659	228004	TV	56
31GT659FM2	233067	TV	56
31GT659JX1	228004	TV	56
31GT660FM1	233068	TV	56
31GT660FM2	233068	TV	56
31GT670	212687	TV	56
31GT671FM1	228003	TV	56
35GT681	211687	TV	45
35GT681FM1	226419	TV	47
35GT681JX1	226419	TV	47
35GT690	228004	TV	56
35GT690JX1	233067	TV	56
35GT695FM1	233068	TV	56
40PW3000K	EP62X0208	TV	42
42802F01	250097	TV	37
42813F01	250097	TV	37
42835F01	250097	TV	37
42914F01	250097	TV	37
43408FC1	250097	TV	37
43418	221109	TV	56
43418FC1	250097	TV	37
43708FE1	250097	TV	37
45EP1000P	194324	TV	35
45EP2000P	194324	TV	35
45YP0010W	194324	TV	35
46GW700C	187803	TV	37
46GW939	207874	TV	45
46GW941	211687	TV	45
46GW944	228005	TV	56
46GW944LG2	233069	TV	56
46GW945LG2	233068	TV	56
46GW950N01	211687	TV	45
46GW950N02	211687	TV	45
46GW950N03	211687	TV	45
46GW951CG1	211687	TV	45
46GW952CG1	211687	TV	45
46GW952DG1	211687	TV	45
685-2008F	156516	TV	36
685-2036C	194330	TV	35
685-2125	194330	TV	35
685-2507M	173916	TV	36
685-4018K	159802	TV	36
685-4228P10	179472	TV	38
7-7690A	54015	TV	49
7-7800A	54015	TV	49
8-1340	211829	TV	43
8-1341	211829	TV	43
8-1342	188107	TV	NO PIX

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
8-1343	188107	TV	NO PIX
8-1933A01	173916	TV	36
8-2033A01	173916	TV	36
8-2033B01	173916	TV	36
8-2033C01	173916	TV	36
8-2040A01	173916	TV	36
8-2040B01	173916	TV	36
8-2040C01	173916	TV	36
8-2041A01	173916	TV	36
8-2041B01	173916	TV	36
8-2041C01	173916	TV	36
8-2042A01	173916	TV	36
8-2062A01	173916	TV	36
8-2062C01	173916	TV	36
8-2070A01	173916	TV	36
8-2070A02	173916	TV	36
8-2074A01	173916	TV	36
8-2074A02	173916	TV	36
8-2540	211792	TV	42
8-2541	211792	TV	42
8-2542	211792	TV	42
8-2543A01	173916	TV	36
8-2543A02	173916	TV	36
8-2545A01	173916	TV	36
8-2545A02	173916	TV	36
8-2548A01	173916	TV	36
8-2548A02	173916	TV	36
8-2558A01	173916	TV	36
8-2558A02	173916	TV	36
8-2562	211878	TV	43
8-2564	211878	TV	43
8-2568A01	173916	TV	36
8-2568A02	173916	TV	36
8-2569	211878	TV	43
8-2649A02	173916	TV	36
8-2650A01	173916	TV	36
8-2650A02	173916	TV	36
8-2651A01	173916	TV	36
8-2651A02	173916	TV	36
8-2652A01	173916	TV	36
8-2652A02	173916	TV	36
8-2660A01	173916	TV	36
8-2660A02	173916	TV	36
8-2664A02	173916	TV	36
8-2665A01	173916	TV	36
8-2665A02	173916	TV	36
8-2668A01	173916	TV	36
8-2668A02	173916	TV	36
8-2670	211687	TV	45
8-2671	211687	TV	45
8-2678A01	173916	TV	36
8-2678A02	173916	TV	36
8-2679	211687	TV	45
8-2680	211687	TV	45
8-2682	211687	TV	45
8-2683A01	187803	TV	37
8-2683B01	187803	TV	37
8-2685A01	187803	TV	37
8-2685B01	187803	TV	37
8-4500	187803	TV	37
9-7450	193024	VCR	39
9-7500	211948	VCR	43
9GP103F01	186344	TV	37
9GP104F01	187803	TV	37
9GP105F01	250099	TV	37
9GP106	226100	TV	46
9GP107	226101	TV	46
9GP108	226101	TV	46
AF141UR	143725	TV	35
AF143SR	143725	TV	35
AG094WRK	143725	TV	35
AG095SR	143725	TV	35
AG167SR	143725	TV	35
AG189SR	143725	TV	35
AH090SR	143725	TV	35
AH130SR	143725	TV	35
AH138WRK	143725	TV	35
AH148SR	143725	TV	35
AH196SR	143725	TV	35
AJ093SR	143725	TV	35
AM239WV	143725	TV	35
AM295WR	143725	TV	35
BF211SR	143725	TV	35
C21220JX1	226551	TV	54
CC187	210842	CAM	50
CC188	217012	CAM	50
CC190	218537	CAM	50
CC603	221125	CAM	51
CC604	221185	CAM	50
CC616	221125	CAM	51
CC618	221125	CAM	51
CC620	221337	CAM	51
CC634	233717	CAM	NO PIX
CC636	233717	CAM	NO PIX
CC639	234383	CAM	51
CC645	233717	CAM	NO PIX
CC710	224594	CAM	51
CC740	224594	CAM	51
CC820	224594	CAM	51
CC900D	221415	CAM	51
CD1050M	58A30577	AUDIO	51
CD1100F	58A16514	AUDIO	49
CD120-11	58A13499	AUDIO	44
CD120-131	58A16270	AUDIO	44
CD2050F	58A15481	AUDIO	44
CD2240F	58A16512	AUDIO	49

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
CD3401	218853	AUDIO	41
CD3406	218853	AUDIO	41
CF265SR	143725	TV	35
CG812	210921	CAM	50
CG814	222042	CAM	51
CG818A	217495	CAM	51
CG819	221387	CAM	51
CG820	221387	CAM	51
CM36702ET	239271	MONITOR	57
DRD102RW	217095	DSS	46
DRD112NW	221102	DSS	46
DRD202RA	232671	DSS	NO PIX
DRD203RW	217094	DSS	46
DRD212NW	221102	DSS	46
DRD213NW	226330	DSS	46
DRD303RA	232672	DSS	46
DRD403RA	232672	DSS	46
DRD505	232675	DSS	46
DRD703RA	232672	DSS	46
DS1120RW	217095	DSS	46
DS2320	232671	DSS	NO PIX
DS2430RW	217094	DSS	46
DS2630RW	221102	DSS	46
DS3330RA	232672	DSS	46
DS4430RA	232672	DSS	46
DS5350	232575	DSS	NO PIX
DS7430RA	232672	DSS	46
E09301BT	226107	TV	46
E09301BTC03	226107	TV	46
E09302BC	226551	TV	54
E09302BCF24	226551	TV	54
E09303KW	226108	TV	46
E09303KWF03	226108	TV	46
E09304WH	226108	TV	46
E09305WHF24	228007	TV	54
E09305WHX24	228007	TV	54
E09310WH	233544	TV	56
E09310WHC24	235443	TV	55
E09310WHF24	235443	TV	55
E09435GBC01	187986	TV	38
E09435GBF01	187986	TV	38
E09436BTC01	187986	TV	38
E09436BTF01	187986	TV	38
E09525KWF01	187986	TV	38
E09535KWC01	200456	TV	38
E09535KWF01	200456	TV	38
E13150BK	226107	TV	46
E13150BKF03	226107	TV	46
E13153WNC03	192108	TV	37
E13153WNF01	192108	TV	37
E13153WNF02	192108	TV	37
E13153WNF03	192108	TV	37
E13154WNC03	192108	TV	37
E13154WNF01	192108	TV	37
E13155WNC01	192108	TV	37
E13155WNC03	192108	TV	37
E13155WNF01	192108	TV	37
E13155WNF03	192108	TV	37
E13159EGF01	187986	TV	38
E13159EGF02	187986	TV	38
E13167WNF01	187986	TV	38
E13167WNF02	187986	TV	38
E13168NGF01	187986	TV	38
E13168NGF02	187986	TV	38
E13169GMC01	187986	TV	38
E13169GMC02	187986	TV	38
E13169GMF01	187986	TV	38
E13169GMF02	187986	TV	38
E13170FWF01	187986	TV	38
E13170FWF02	187986	TV	38
E13200WN	226109	TV	45
E13200WNC24	227803	TV	54
E13201BK	226109	TV	45
E13201WNC03	226107	TV	46
E13201WNF03	226107	TV	46
E13202BKC15	226109	TV	45
E13202WT	227803	TV	54
E13203BK	226109	TV	45
E13205BK	226109	TV	45
E13209BC	226551	TV	54
E13230WNC01	187986	TV	38
E13230WNF01	187986	TV	38
E13230WNF02	187986	TV	38
E13230WNF03	187986	TV	38
E13231GMC01	187986	TV	38
E13231GMF01	187986	TV	38
E13231GMF02	187986	TV	38
E13232EGF01	187986	TV	38
E13232EGF02	187986	TV	38
E13233KWC01	187986	TV	38
E13233KWF01	187986	TV	38
E13233KWF02	187986	TV	38
E13240WNF01	187986	TV	38
E13240WNF03	187986	TV	38
E13241GMC01	187986	TV	38
E13241GMF01	187986	TV	38
E13253KWC01	187986	TV	38
E13253KWF01	187986	TV	38
E13320SE	226107	TV	46
E13320SEC03	226107	TV	46
E13320SEC04	226107	TV	46
E13320SEF04	226107	TV	46
E13321FWC04	226107	TV	46
E13321KW	226108	TV	46
E13321KWC04	226107	TV	46
E13322BT	226108	TV	46

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
E13323SE	226107	TV	46
E13323SEC15	226107	TV	46
E13324WH	226108	TV	46
E13325SF	226108	TV	46
E13327SF	226108	TV	46
E13327SFC15	226108	TV	46
E13327SFF15	226108	TV	46
E13331BKC25	226551	TV	54
E13331BKF25	226551	TV	54
E13332BC	233543	TV	NO PIX
E13333WHF25	228007	TV	54
E13334WH	233544	TV	56
E13335GY	226551	TV	54
E13335GYF25	226551	TV	54
E13360GTF01	187986	TV	38
E13361GTC01	200456	TV	38
E13361GTF01	200456	TV	38
ED339WR	194330	TV	35
ED348WR	194330	TV	35
ED399WR	194330	TV	35
EER318WR	194330	TV	35
EER327WR	194330	TV	35
EER328WR	194330	TV	35
EER338WR	194330	TV	35
EER348WR	194330	TV	35
EER397S	187986	TV	38
EER398WR	194330	TV	35
EFC337WR	156516	TV	36
EFC338WR	156516	TV	36
EFC339FR	156516	TV	36
EFC398WR	156516	TV	36
EFR332WR	156516	TV	36
EFR337WR	156516	TV	36
EFR338WR	156516	TV	36
EFR339FR	156516	TV	36
EFR398WR	156516	TV	36
EJR338WR	156516	TV	36
EJR339FR	156516	TV	36
EJR358SR	156516	TV	36
EJR398FR	156516	TV	36
EKR338WR	159802	TV	36
EKR339FR	156516	TV	36
EKR360SR	159802	TV	36
EL100-10	58A13968	AUDIO	44
ELR333F	156516	TV	36
ELR338WR	159802	TV	36
ELR339FR	156516	TV	36
EMR339WR	156516	TV	36
EMR348ER	173916	TV	36
EMR348WR	173916	TV	36
EMR349FR	173916	TV	36
EMR358WR	173916	TV	36
EMR359ER	173916	TV	36
EPR358AR1	173916	TV	36
EPR358WR1	173916	TV	36
EPR359DR1	173916	TV	36
ES385SERIES	143725	TV	35
ES435WR	143725	TV	35
EU396WR	143725	TV	35
EXR345ER1	182727	TV	36
F19201BK	226109	TV	45
F19201BKTX1	226109	TV	45
F19201BKTX2	226102	TV	46
F19201BKTX2	226551	TV	54
F19202WN	227803	TV	54
F19202WN	226109	TV	45
F19202WNTX1	226102	TV	46
F19202WNTX1	226109	TV	45
F19202WNTX2	227803	TV	54
F19203BK	226109	TV	45
F19203BKTX1	226109	TV	45
F19203BKTX2	226109	TV	45
F19207BC	226551	TV	54
F19218WTTX2	227803	TV	54
F19220BK	226109	TV	45
F19220BKTX1	226109	TV	45
F19220BKTX2	226551	TV	54
F19221BCTX1	226551	TV	54
F19240GY	226551	TV	54
F19251GY	226551	TV	54
F19251GYTX1	226551	TV	54
F19253BC	221133	TV	47
F19253BCJX1	221133	TV	47
F20163WNA02	192108	TV	37
F20163WNA04	192108	TV	37
F20163WNN02	192108	TV	37
F20163WNN04	192108	TV	37
F20201WN	226109	TV	45
F20201WNFA1	226109	TV	45
F20201WNJX1	226109	TV	45
F20201WNTX1	226109	TV	45
F20203BK	226109	TV	45
F20203BKJX1	226109	TV	45
F20203BKTX1	226109	TV	45
F20231WN	226109	TV	45
F20231WNFA1	226109	TV	45
F20251WN	226109	TV	45
F20301SF	226107	TV	46
F20343WNF01	192108	TV	37
F20345WNFB1	192108	TV	37
F20345WNNB1	192108	TV	37
F20351SF	226107	TV	46
F20352SF	221133	TV	47
F20352SFFB1	221133	TV	47
F20352SFJX1	221133	TV	47
F20352SFTX1	221133	TV	47

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
F20352SFTX2	221133	TV	47
F20479WNA03	173916	TV	36
F20479WNN03	173916	TV	36
F20514WNA01	187986	TV	38
F20514WNA02	187986	TV	38
F20514WNA03	187986	TV	38
F20514WNA04	187986	TV	38
F20514WNN01	187986	TV	38
F20514WNN02	187986	TV	38
F20514WNN03	187986	TV	38
F20514WNN04	187986	TV	38
F20515EGA01	187986	TV	38
F20515EGN01	187986	TV	38
F20516BHA01	187986	TV	38
F20516BHA02	187986	TV	38
F20516BHA03	187986	TV	38
F20516BHN01	187986	TV	38
F20517WNA01	187986	TV	38
F20517WNA02	187986	TV	38
F20517WNA03	187986	TV	38
F20517WNA04	187986	TV	38
F20517WNN01	187986	TV	38
F20517WNN02	187986	TV	38
F20517WNN03	187986	TV	38
F20517WNN04	187986	TV	38
F20518WNA02	187986	TV	38
F20518WNA04	187986	TV	38
F20518WNN04	187986	TV	38
F20519AKA01	187986	TV	38
F20519AKA02	187986	TV	38
F20519AKN01	187986	TV	38
F20519AKN03	187986	TV	38
F20530WNFA2	179472	TV	38
F20530WNNA2	179472	TV	38
F20532DWA02	179472	TV	38
F20532DWA04	179472	TV	38
F20533BMA01	187986	TV	38
F20533BMA02	187986	TV	38
F20533BMA04	187986	TV	38
F20535DWA01	187986	TV	38
F20535DWA02	187986	TV	38
F20535DWA03	187986	TV	38
F20535DWA04	187986	TV	38
F20535DWN03	187986	TV	38
F20536EHA01	179472	TV	38
F20536EHA02	179472	TV	38
F20536EHA04	179472	TV	38
F20536EHN01	179472	TV	38
F20537CPA01	179472	TV	38
F20537CPA02	179472	TV	38
F20537CPA03	179472	TV	38
F20537CPA04	179472	TV	38
F20537CPN03	179472	TV	38
F20537CPN04	179472	TV	38
F20538DGA01	187986	TV	38
F20538DGA02	187986	TV	38
F20538DGA03	187986	TV	38
F20538DGA04	187986	TV	38
F20538DGN01	187986	TV	38
F20538DGN02	187986	TV	38
F20538DGN03	187986	TV	38
F20539DGA02	179472	TV	38
F20539DGA04	179472	TV	38
F20539DGN02	179472	TV	38
F20540WNF01	187987	TV	38
F20540WNN01	187987	TV	38
F20544WNF01	187987	TV	38
F20544WNN01	187987	TV	38
F20545AKF01	187987	TV	38
F20545AKN01	187987	TV	38
F20546EZF01	187987	TV	38
F20546EZN01	187987	TV	38
F20549WNF01	187986	TV	38
F20550AKF01	187986	TV	38
F20551WNFB1	179472	TV	38
F20551WNNB1	179472	TV	38
F20552EZF01	187986	TV	38
F20552EZN01	187986	TV	38
F20558WNF01	187986	TV	38
F20566AKF01	179472	TV	38
F20567CPF01	179472	TV	38
F20567CPN01	179472	TV	38
F20569GGF01	179472	TV	38
F20569GGN01	179472	TV	38
F20570WNFB1	211687	TV	45
F20571EMFB1	211687	TV	45
F20571EMNB1	211687	TV	45
F20575EMFB1	211687	TV	45
F20575EMNB1	211687	TV	45
F20580WNN01	179472	TV	38
F20581EGF01	179472	TV	38
F20581EGN01	179472	TV	38
F20583MKF01	179472	TV	38
F20583MKN01	179472	TV	38
F20590HGF01	179472	TV	38
F20590HGN01	179472	TV	38
F20591EGF01	179472	TV	38
F20595BHF01	179472	TV	38
F20595BHN01	179472	TV	38
F20597AKF01	179472	TV	38
F20597AKN01	179472	TV	38
F20600ETFB1	211686	TV	45
F20600ETNB1	211686	TV	45
F20601SE	221133	TV	47
F20601SEFA1	221133	TV	47
F20602SE	221133	TV	47

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
F20602SEJX1	221133	TV	47
F20602SEJX3	221133	TV	47
F20602SETX1	221133	TV	47
F20602SETX3	221133	TV	47
F20603BC	221133	TV	47
F20603BCTX1	233065	TV	47
F20631SE	221133	TV	47
F20631SEFB1	221133	TV	47
F20631SEFX1	221133	TV	47
F20632SE	221133	TV	47
F20633SE	221133	TV	47
F20635SEFB1	221107	TV	46
F20636BLFB1	221107	TV	46
F20637ET	221133	TV	47
F20638WH	221133	TV	47
F20640BC	233543	TV	NO PIX
F20640BCFB1	235442	TV	55
F20640BCTX1	235442	TV	55
F20680WNF01	179472	TV	38
F20681DGF01	179472	TV	38
F20681DGN01	179472	TV	38
F20683DWF01	179472	TV	38
F20683DWN01	179472	TV	38
F20684MKF01	179472	TV	38
F20700DGN01	197944	TV	38
F20705DGN01	211687	TV	45
F20706FTFB1	211687	TV	45
F20706FTNB1	211687	TV	45
F25104WTFE1	227803	TV	54
F25104WTJX1	227803	TV	54
F25104WTTX1	227803	TV	54
F25143WNF01	192108	TV	37
F25150WNF01	187986	TV	38
F25151GGF01	187986	TV	38
F25152WNF01	187986	TV	38
F25163WNFC1	192108	TV	37
F25163WNNC1	192108	TV	37
F25190SEFE1	226419	TV	47
F25190SEFE1	207872	TV	45
F25190SENX1	207872	TV	45
F25209WT	227803	TV	54
F25210BK	226109	TV	45
F25211BC	221133	TV	47
F25211BCTX1	233065	TV	47
F25215WTFE1	227803	TV	54
F25215WTTX1	227803	TV	54
F25216WT	226551	TV	54
F25217BCTX1	233065	TV	47
F25250BC	226551	TV	54
F25250BCFE	226551	TV	54
F25251WN	226109	TV	45
F25254GY	221133	TV	47
F25254GYFE1	221133	TV	47
F25254GYJX1	221133	TV	47
F25650BLFE1	215420	TV	46
F25651BL	221133	TV	47
F25651BLFE1	215420	TV	46
F25652BL	221133	TV	47
F25653BCFE1	221133	TV	47
F25653BCJX1	221133	TV	47
F25653ET	221133	TV	47
F25654BC	221133	TV	47
F25654BCFE1	233065	TV	47
F25654BCJX1	233065	TV	47
F25660ET	221132	TV	47
F25671SE	221132	TV	47
F25671SEFE1	221132	TV	47
F25672SE	221132	TV	47
F25673FT	221132	TV	47
F25673GYFE1	221132	TV	47
F25673GYJX1	221132	TV	47
F25674GY	221132	TV	47
F26010WNF01	187986	TV	38
F26012WNF01	187986	TV	38
F26012WNU01	187986	TV	38
F26013TNN01	180339	TV	37
F26020WNF01	179472	TV	38
F26026MKF01	179472	TV	38
F26030WNF01	187986	TV	38
F26040AKF01	179472	TV	38
F26040WNF01	179472	TV	38
F26041DGF01	179472	TV	38
F26041DGU01	179472	TV	38
F26043MKF01	179472	TV	38
F26050WNFE1	211687	TV	45
F26051EMFE1	211687	TV	45
F26051EMNE1	211687	TV	45
F26071ESFB1	211687	TV	45
F26071ESNB1	211687	TV	45
F26100AKF01	179472	TV	38
F26101NGF01	179472	TV	38
F26103EGF01	179472	TV	38
F26105MKF01	179472	TV	38
F26120WNF01	179472	TV	38
F26121DGF01	179472	TV	38
F26121DGU01	179472	TV	38
F26122MKF01	179472	TV	38
F26150BHF01	179472	TV	38
F26155AKF01	179472	TV	38
F26251ET	226109	TV	45
F26631SE	221133	TV	47
F26632SE	221133	TV	47
F26632SEFE1	221133	TV	47
F26633SF	221133	TV	47
F26634SF	221133	TV	47
F26671FT	221132	TV	47

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
F26671FTFE1	221132	TV	47
F26671FTJX1	221132	TV	47
F26672FT	221132	TV	47
F27100AKF01	177994	TV	38
F27101MMF01	177994	TV	38
F27107EGF01	177994	TV	38
F27110NGF01	177994	TV	38
F27122TNF01	177994	TV	38
F27123SBF01	177994	TV	38
F27150BHF01	177994	TV	38
F27150SEFB1	207872	TV	45
F27150SEFE1	226419	TV	47
F27150SEJE1	207872	TV	45
F27155AKF01	177994	TV	38
F27159WNF01	179472	TV	38
F27160WNF01	179472	TV	38
F27170DGF01	179472	TV	38
F27171CPF01	179472	TV	38
F27172MKF01	179472	TV	38
F27180DGF01	197944	TV	38
F27186SMFE1	211687	TV	45
F27187BTN02	211687	TV	45
F27189ETNX1	211687	TV	45
F27190TNF01	197944	TV	38
F27191DGF01	211687	TV	45
F27191DGF02	211687	TV	45
F27191DGW01	211687	TV	45
F27191DGW02	211687	TV	45
F27193BTN01	211687	TV	45
F27193BTN02	211687	TV	45
F27194SMF01	211687	TV	45
F27194SMW01	211687	TV	45
F27194SMW02	211687	TV	45
F27195CPN01	197944	TV	38
F27196BTN01	197944	TV	38
F27196BTN02	197944	TV	38
F27201GGFE1	211687	TV	45
F27201GGNE1	211687	TV	45
F27202FTFB1	226419	TV	47
F27202FTNX1	226419	TV	47
F27203WNFE1	211687	TV	45
F27227EMFB1	211687	TV	45
F27227EMNB1	211687	TV	45
F27228ETNX1	211687	TV	45
F27230EM	212233	TV	45
F27230EMFB1	233063	TV	54
F27230EMJX1	233063	TV	54
F27230ES	212233	TV	45
F27235ET	212233	TV	45
F27240WTFE1	226551	TV	54
F27242GY	226551	TV	54
F27244BC	221133	TV	47
F27244BCTX2	233065	TV	47
F27251WN	226109	TV	45
F27252GY	221133	TV	47
F27252GYFE1	221133	TV	47
F27252GYJX1	221133	TV	47
F27252GYTX1	233065	TV	47
F27252SG	221133	TV	47
F27253GYFE1	233065	TV	47
F27255BC	221133	TV	47
F27255BCFE1	233065	TV	47
F27255BCTX1	233065	TV	47
F27351WN	226107	TV	46
F27630SFFE1	221106	TV	46
F27631SF	221133	TV	47
F27632SE	221133	TV	47
F27634ET	221133	TV	47
F27636BC	221133	TV	47
F27636BCFE1	221133	TV	47
F27636BCJX1	221133	TV	47
F27636FT	221133	TV	47
F27638BC	221133	TV	47
F27638BCJX1	221133	TV	47
F27638ET	221133	TV	47
F27670SFFE1	215419	TV	47
F27671SE	221132	TV	47
F27671SEFE1	221132	TV	47
F27671SEJX1	221132	TV	47
F27672ET	221132	TV	47
F27673SE	221132	TV	47
F27674ET	221132	TV	47
F27675BCFE1	221132	TV	47
F27675BCJX1	221132	TV	47
F27676BC	221132	TV	47
F27677BC	221132	TV	47
F27678BC	233064	TV	47
F27680GYFE1	232306	TV	54
F27681GY	232306	TV	54
F27683GY	238544	TV	NO PIX
F27701BK	221143	TV	45
F27701BKFE1	221143	TV	45
F27701BKJX1	221143	TV	45
F27702SB	225839	TV	55
F27702SBFE1	225839	TV	55
F27702SBJX1	225839	TV	55
F27730EM	212233	TV	45
F27731BK	212234	TV	45
F27732SB	225838	TV	55
F27733SB	225838	TV	55
F27733SBFE1	233063	TV	54
F27733SBJX1	233063	TV	54
F27740SB	221115	TV	55
F31200BA	177994	TV	38
F31220WNN01	179472	TV	38
F31222SBN01	211687	TV	45

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
F31222SBN02	211687	TV	45
F31223GGNM1	211687	TV	45
F31224GGNX1	226419	TV	47
F31225SBN01	197944	TV	38
F31226ES	212233	TV	45
F31226ESJM1	233063	TV	54
F313224GGNM1	226419	TV	47
F31325SBN01	197944	TV	38
F31375CPN01	197944	TV	38
F31400SBN01	197944	TV	38
F31400SBN02	197944	TV	38
F31631SE	221133	TV	47
F31632ET	221133	TV	47
F31633SB	221133	TV	47
F31671SE	221132	TV	47
F31671SEJX1	221132	TV	47
F31671SF	221132	TV	47
F31672ET	221132	TV	47
F31700GG	212233	TV	45
F31700GGFX1	233063	TV	54
F31700GGJX1	233063	TV	54
F32632SB	221133	TV	47
F32672SB	221132	TV	47
F32674	238544	TV	NO PIX
F32676SBFM1	232306	TV	54
F32683SB	238544	TV	NO PIX
F32700SB	221115	TV	55
F32730SB	221115	TV	55
F32730SBFM1	221115	TV	55
F32730SBJX1	221115	TV	55
F35050STNM1	211687	TV	45
F35050STNX1	226419	TV	47
F35100STNM1	212233	TV	45
F35100STNM2	212233	TV	45
F35670MB	221133	TV	47
F35670MBFM1	233065	TV	47
F35672MB	221132	TV	47
F35673MB	221132	TV	47
F35700SBFM1	226419	TV	47
F35700SBJX1	226419	TV	47
F35720SB	211681	TV	45
F35730ST	212233	TV	45
F35730STFM1	233063	TV	54
F35731MB	225838	TV	55
F35731MBFM2	233063	TV	54
F35732MB	221115	TV	55
F35751MB	212233	TV	45
F35755MB	221115	TV	55
F35755MBFM1	221115	TV	55
F35755MBFM2	221115	TV	55
F35755MBJX2	221115	TV	55
F35760MB	221115	TV	55
F35760MBFM1	221115	TV	55
F36673ET	233064	TV	47
F36674ET	238544	TV	NO PIX
F36676ETFM1	232306	TV	54
F36676JX1	232306	TV	54
F36683AT	238544	TV	NO PIX
FA478WR	143725	TV	35
FA478YRX	143725	TV	35
FA488TR	143725	TV	35
FA498WDA	188206	TV	35
FA520WR	143725	TV	35
FB488WR	143725	TV	35
FB498WDA	188206	TV	35
FB530WR	143725	TV	35
FC498WR	194330	TV	35
FC499FR	194330	TV	35
FC530WR	194330	TV	35
FCX498WR	194330	TV	35
FCX499FR	194330	TV	35
FD488WR	194330	TV	35
FD498WR	194330	TV	35
FD530SR	194330	TV	35
FEC430B	179472	TV	38
FEC465WR	194330	TV	35
FEC467WR	194330	TV	35
FEC468WR	159930	TV	36
FEC469FR	194330	TV	35
FER465WR	194330	TV	35
FER467WR	194330	TV	35
FER468WR	194330	TV	35
FER469FR	194330	TV	35
FER488WR	159930	TV	36
FER498WR	159930	TV	36
FER525SR	194330	TV	35
FFC468PR	156516	TV	36
FFC468WR	156516	TV	36
FFC469WR	156516	TV	36
FFC473WR	156516	TV	36
FFC530SR	156516	TV	36
FFR468PR	156516	TV	36
FFR468WR	156516	TV	36
FFR469WR	156516	TV	36
FFR473WR	156516	TV	36
FFR478WR	156516	TV	36
FFR488WR	159930	TV	36
FFR498WR	159930	TV	36
FFR530SR	156516	TV	36
FGR2002S	159930	TV	36
FGR2002W	159930	TV	36
FGR2003W	159930	TV	36
FGR2020W	159930	TV	36
FGR460WR	156516	TV	36
FGR460YR	156516	TV	36
FJC458WR	156516	TV	36

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
FJR2010W	159930	TV	36
FJR458WR	156516	TV	36
FJR468WR	156516	TV	36
FJR478WR	159930	TV	36
FJR479WR	159930	TV	36
FJR480FR	159930	TV	36
FJR484WR	159930	TV	36
FJR488SR	159930	TV	36
FJR530PR	159930	TV	36
FKR2010T	159930	TV	36
FKR2018T	159930	TV	36
FKR460WR	156516	TV	36
FKR461FR	156516	TV	36
FKR468WR	159930	TV	36
FKR478WR	159802	TV	36
FKR479WR	159802	TV	36
FKR480FR	159802	TV	36
FKR481FR	159802	TV	36
FKR484WR	159802	TV	36
FKR488WR	159802	TV	36
FKR490SR	159802	TV	36
FKR491TR	159802	TV	36
FKR620TR	159802	TV	36
FKR622SR	159802	TV	36
FKR622TR	159802	TV	36
FKR623SR	159802	TV	36
FLR2022T	159802	TV	36
FLR2023S	159802	TV	36
FLR2522T	159802	TV	36
FLR458W	159802	TV	36
FLR460WR	156516	TV	36
FLR461FR	156516	TV	36
FLR468WR	156516	TV	36
FLR471WR	159802	TV	36
FLR473WR	159802	TV	36
FLR488WR	159802	TV	36
FLR620TR	159802	TV	36
FLR622TR	159802	TV	36
FLR624ER	159802	TV	36
FMR460WR	156516	TV	36
FMR471ER	173916	TV	36
FMR476WR	173916	TV	36
FMR478ER	173916	TV	36
FMR486WR	173916	TV	36
FMR488TR	159802	TV	36
FMR491DR	173916	TV	36
FMR510WR	173916	TV	36
FMR514TR	173916	TV	36
FMR560ER	180339	TV	37
FMR560TR	180339	TV	37
FMR570ER	180339	TV	37
FMR570TR	180339	TV	37
FMR575TR	180339	TV	37
FMR620WR	173916	TV	36
FMR622TR	173916	TV	36
FMR623ER	173916	TV	36
FMR710TR	173916	TV	36
FMR722ER	180339	TV	37
FMR722TR	180339	TV	37
FMR725TR	180339	TV	37
FPR2670T1	179472	TV	38
FPR2670T2	179472	TV	38
FPR2675E1	179472	TV	38
FPR2675E2	179472	TV	38
FPR2722N1	177994	TV	38
FPR2722T1	177994	TV	38
FPR2722T2	177994	TV	38
FPR2723E1	177994	TV	38
FPR2723E2	177994	TV	38
FPR2725G1	177994	TV	38
FPR471T	173916	TV	36
FPR472TR	173916	TV	36
FPR472TR1	173916	TV	36
FPR472TR2	173916	TV	36
FPR473B	173916	TV	36
FPR474BR	173916	TV	36
FPR474BR1	173916	TV	36
FPR474BR2	173916	TV	36
FPR476DR1	173916	TV	36
FPR476DR2	173916	TV	36
FPR477E	173916	TV	36
FPR478ER	173916	TV	36
FPR478ER1	173916	TV	36
FPR478ER2	173916	TV	36
FPR483ER1	173916	TV	36
FPR485BR1	173916	TV	36
FPR487WR1	173916	TV	36
FPR487WR3	173916	TV	36
FPR489WR1	173916	TV	36
FPR500W	173916	TV	36
FPR505W	173916	TV	36
FPR510WR	173916	TV	36
FPR510WR3	173916	TV	36
FPR515WR	173916	TV	36
FPR515WR1	173916	TV	36
FPR515WR2	173916	TV	36
FPR515WR3	173916	TV	36
FPR518WR1	173916	TV	36
FPR518WR3	173916	TV	36
FPR520WR1	180339	TV	37
FPR520WR2	180339	TV	37
FPR550WR1	180339	TV	37
FPR550WR2	180339	TV	37
FPR555WR	180339	TV	37
FPR555WR1	180339	TV	37
FPR555WR2	180339	TV	37

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
FPR560ER	180339	TV	37
FPR560ER1	180339	TV	37
FPR560ER2	180339	TV	37
FPR566TR1	180339	TV	37
FPR566TR2	180339	TV	37
FPR570TR	180339	TV	37
FPR570TR1	180339	TV	37
FPR570TR2	180339	TV	37
FPR577ER1	180339	TV	37
FPR577ER2	180339	TV	37
FPR710TR1	173916	TV	36
FPR710TR2	173916	TV	36
FPR720WR1	180339	TV	37
FPR720WR2	180339	TV	37
FPR722TR1	180339	TV	37
FPR722TR2	180339	TV	37
FPR725ER1	180339	TV	37
FPR725ER2	180339	TV	37
FS480WR	143725	TV	35
FS520WR	143725	TV	35
FU450FR	143725	TV	35
FU478WR	143725	TV	35
FU478YR	143725	TV	35
FU498BDA	188206	TV	35
FX209002N01	250097	TV	37
FX209002N02	250097	TV	37
FX478WR	143725	TV	35
FX478YR	143725	TV	35
FXR469ER1	173916	TV	36
FXR469ER2	173916	TV	36
FXR469WR1	173916	TV	36
FXR469WR2	173916	TV	36
FXR620WR1	173916	TV	36
FXR620WR2	173916	TV	36
G25043TNP01	192108	TV	37
G25100AT	226109	TV	45
G25119HPKF1	187986	TV	38
G25119HPMF1	187986	TV	38
G25171TNM01	187986	TV	38
G25179TKM01	187986	TV	38
G25189TKMF1	211687	TV	45
G25290TNMF1	211687	TV	45
G25341WK	226107	TV	46
G25342AT	226107	TV	46
G25343WK	226107	TV	46
G25361BK	221133	TV	47
G25681WK	221132	TV	47
G25681WKKF1	221132	TV	47
G26131TNK01	187986	TV	38
G26131TNL01	187986	TV	38
G26133TNC01	187986	TV	38
G26133TNL01	187986	TV	38
G26135PNK01	187986	TV	38
G26137TNK01	187986	TV	38
G26137TNL01	187986	TV	38
G26139HPK01	187986	TV	38
G26141TNM01	187986	TV	38
G26145PNM01	187986	TV	38
G26149HPM01	187986	TV	38
G26231TNM01	187986	TV	38
G26231TNY01	187986	TV	38
G26233TNM01	187986	TV	38
G26235PNM01	187986	TV	38
G26235PNP01	187986	TV	38
G26239TKM01	187986	TV	38
G26239TKY01	187986	TV	38
G26251TN1	173916	TV	36
G26261TNC01	179472	TV	38
G26261TNK01	179472	TV	38
G26261TNL01	179472	TV	38
G26265TKK01	179472	TV	38
G26269HPC01	179472	TV	38
G26269HPK01	179472	TV	38
G26269HPL01	179472	TV	38
G26271TNC01	179472	TV	38
G26271TNL01	179472	TV	38
G26273TNK01	179472	TV	38
G26275CKK01	179472	TV	38
G26275CKL01	179472	TV	38
G26290TNPF1	211687	TV	45
G26291WKKF1	211687	TV	45
G26291WKMF1	211687	TV	45
G26291WKMF2	211687	TV	45
G26295PHMF1	211687	TV	45
G26299TKKF1	211687	TV	45
G26299TKMF1	211687	TV	45
G26330TNC01	177994	TV	38
G26331TNC01	177994	TV	38
G26335TKC01	177994	TV	38
G26339HPC01	177994	TV	38
G26341TNC01	177994	TV	38
G26343TNC01	177994	TV	38
G26345TKC01	177994	TV	38
G26350TNP01	179472	TV	38
G26351TNP01	179472	TV	38
G26352TKP01	179472	TV	38
G26353TNP01	179472	TV	38
G26353TNZ01	179472	TV	38
G26354SBP01	179472	TV	38
G26359HPM01	179472	TV	38
G26400TNKF1	211687	TV	45
G26400TNMF1	211687	TV	45
G26661CK	221133	TV	47
G26661CKCX1	221132	TV	47
G26661CKKF1	221132	TV	47
G26681CK	221132	TV	47

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
G26681CKKF1	221132	TV	47
G26682CK	221132	TV	47
G26683CK	221132	TV	47
G26683CKCX1	221132	TV	47
G26683CKKF1	221132	TV	47
G26685TKCX1	221132	TV	47
G26685TKKF1	221132	TV	47
G26685WK	221132	TV	47
G26686WK	221132	TV	47
G27130TNK01	179472	TV	38
G27140TNK01	177994	TV	38
G27143TNC01	177994	TV	38
G27149TKC01	177994	TV	38
G27201WKKM2	211687	TV	45
G27201WKLM1	211687	TV	45
G27220TNKF1	211687	TV	45
G27220TNMF1	211687	TV	45
G27220TNMF2	211687	TV	45
G27221WKKF1	211687	TV	45
G27221WKMF1	211687	TV	45
G27221WKMF2	211687	TV	45
G27229TKKF1	211687	TV	45
G27229TKMF1	211687	TV	45
G27250CPC01	177994	TV	38
G27251TNC01	177994	TV	38
G27255NPC01	177994	TV	38
G27259HPC01	177994	TV	38
G27302ATDX1	233065	TV	47
G27302ATKF1	221133	TV	47
G27302ATLFO1	233065	TV	47
G27303HP	221133	TV	47
G27303HPLF1	233065	TV	47
G27304DTKF1	221133	TV	47
G27304HP	221133	TV	47
G27331TNM01	179472	TV	38
G27335TKP01	179472	TV	38
G27339HPM01	179472	TV	38
G27340CKC01	177994	TV	38
G27341WK	226107	TV	46
G27342WK	226107	TV	46
G27343HP	226107	TV	46
G27344HP	226107	TV	46
G27346	221132	TV	47
G27347HP	221132	TV	47
G27350	221132	TV	47
G27350CPC01	177994	TV	38
G27351ATDX1	221132	TV	47
G27351ATLP1	221132	TV	47
G27352DT	221132	TV	47
G27352DTCX1	221132	TV	47
G27352DTKF1	221132	TV	47
G27371TNM01	179472	TV	38
G27371TNPO1	179472	TV	38
G27372TNPO1	179472	TV	38
G27373CPP01	179472	TV	38
G27390TNM01	211687	TV	45
G27390TNM02	211687	TV	45
G27391WKL01	211687	TV	45
G27391WKL02	211687	TV	45
G27391WKL03	211687	TV	45
G27396CPL01	211687	TV	45
G27396CPL02	211687	TV	45
G27399CRP01	211687	TV	45
G27399CRP02	211687	TV	45
G27400WKLM1	211687	TV	45
G27450CPN01	197944	TV	38
G27500GBC01	197944	TV	38
G27509CPL01	197944	TV	38
G27665WK	221133	TV	47
G27666AT	221133	TV	47
G27668WK	221133	TV	47
G27680	221132	TV	47
G27681CK	221132	TV	47
G27683HP	221132	TV	47
G27684HP	221132	TV	47
G27685HP	221132	TV	47
G27687WK	221132	TV	47
G27688HP	221132	TV	47
G27689AT	221132	TV	47
G27690	221132	TV	47
G27692	221132	TV	47
G27692AT	221132	TV	47
G27693BA	221132	TV	47
G27750WK	212233	TV	45
G27750WKA	212234	TV	45
G27751AT	225838	TV	55
G27751ATLM1	225838	TV	55
G31100CK	177994	TV	38
G31120TNN01	179472	TV	38
G31121TNN01	211687	TV	45
G31121TNN02	211687	TV	45
G31129WKL01	211687	TV	45
G31129WKL02	211687	TV	45
G31140CPN01	197944	TV	38
G31149TPN01	197944	TV	38
G31150CK	177994	TV	38
G31151WK	212233	TV	45
G31159TP	212233	TV	45
G31161CPN01	197944	TV	38
G31163BTL01	197944	TV	38
G31163BTL02	197944	TV	38
G31641CK	221133	TV	47
G31642CK	221133	TV	47
G31681AT	221132	TV	47
G31750WK	212233	TV	45
G31750WKA	212234	TV	45

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
G31750WKALM	233063	TV	54
G31750WKDX1	233063	TV	54
G31750WKLM1	233063	TV	54
G32642SKLM1	221133	TV	47
G32643SK	221133	TV	47
G32643SKLX1	233065	TV	47
G32681AT	221132	TV	47
G32681ATLM1	221132	TV	47
G32686LVLX1	238544	TV	NO PIX
G32750AT	221115	TV	55
G34169ET	216198	TV	49
G34169ETLW1	218496	TV	53
G34170AT	212234	TV	45
G34170AT	216198	TV	49
G34170ATLW1	218496	TV	53
G34300WKN01	197944	TV	38
G35300WKL01	197944	TV	38
G35300WKL02	197944	TV	38
G35301WKL01	197944	TV	38
G35301WKL02	197944	TV	38
G35302WKLM1	212233	TV	45
G35303SKLM1	212233	TV	45
G35350WKL01	197944	TV	38
G35350WKL02	197944	TV	38
G35351CPL01	197944	TV	38
G35351CPL02	197944	TV	38
G35400SB	221115	TV	55
G35772AT	221132	TV	47
G35773SK	221132	TV	47
G35781AT	221132	TV	47
G35830WK	225838	TV	55
G35830WK	212233	TV	45
G35830WKDX1	233063	TV	54
G35830WKDX2	233063	TV	54
G35830WKLM1	233063	TV	54
G35831AT	221115	TV	55
G35831ATLM1	221115	TV	55
G35850CK	212233	TV	45
G35851LA	221115	TV	55
G35851LALM1	221115	TV	55
G35851SK	221115	TV	55
G36788	238544	TV	NO PIX
GA720SR	143725	TV	35
GA724LR	143725	TV	35
GA725HR	143725	TV	35
GA728SR	143725	TV	35
GA900 SERIES	188206	TV	35
GB720SR	143725	TV	35
GB724LR	143725	TV	35
GB725HR	143725	TV	35
GB728SR	143725	TV	35
GB900 SERIES	188206	TV	35
GC760SR	194330	TV	35
GC764LR	194330	TV	35
GC765HR	194330	TV	35
GC768SR	194330	TV	35
GC778SR	194330	TV	35
GC930ER	194330	TV	35
GC930SR	194330	TV	35
GC935HR	194330	TV	35
GC936TR	194330	TV	35
GC938SR	194330	TV	35
GD649SR	194330	TV	35
GD760TR	194330	TV	35
GD760YR	194330	TV	35
GD764LR	194330	TV	35
GD765HR	194330	TV	35
GD768SR	194330	TV	35
GD778SR	194330	TV	35
GD930AR	194330	TV	35
GD930SR	194330	TV	35
GD935HR	194330	TV	35
GD936TR	194330	TV	35
GD938SR	194330	TV	35
GD980SR	194330	TV	35
GD985HR	194330	TV	35
GD988SR	194330	TV	35
GE21600	226100	TV	46
GE27600	226100	TV	46
GEC679SR	194330	TV	35
GEC689SR	194330	TV	35
GER619SR	194330	TV	35
GER623SR	194330	TV	35
GER636HR	194330	TV	35
GER639SR	194330	TV	35
GER679SR	194330	TV	35
GER681SR	194330	TV	35
GER685HR	194330	TV	35
GER685LR	194330	TV	35
GER689SR	194330	TV	35
GER760TR	159930	TV	36
GER760YR	159930	TV	36
GER764LR	159930	TV	36
GER765HR	159930	TV	36
GER768SR	159930	TV	36
GER770TR	159930	TV	36
GER780TR	159930	TV	36
GER790ER	159930	TV	36
GER790SR	159930	TV	36
GER930SR	159930	TV	36
GER935HR	159930	TV	36
GER936TR	159930	TV	36
GER938SR	159930	TV	36
GER985HR	159930	TV	36
GER988SR	159930	TV	36
GF621SR	143725	TV	35

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
GFC646SR	156516	TV	36
GFC649SR	156516	TV	36
GFC661TR	156516	TV	36
GFC666HR	156516	TV	36
GFC669SR	156516	TV	36
GFC672TR	156516	TV	36
GFC679SR	156516	TV	36
GFC681TR	156516	TV	36
GFC682TR	156516	TV	36
GFC689SR	156516	TV	36
GFC691TR	156516	TV	36
GFC693TR	156516	TV	36
GFC695HR	156516	TV	36
GFC695LR	156516	TV	36
GFC697TR	156516	TV	36
GFC699SR	156516	TV	36
GFR1001AR	159930	TV	36
GFR661TR	156516	TV	36
GFR666HR	156516	TV	36
GFR669SR	156516	TV	36
GFR672TR	156516	TV	36
GFR679SR	156516	TV	36
GFR691TR	156516	TV	36
GFR693TR	156516	TV	36
GFR695HR	156516	TV	36
GFR695LR	156516	TV	36
GFR697TR	156516	TV	36
GFR699SR	156516	TV	36
GFR760TR	159930	TV	36
GFR763BR	159930	TV	36
GFR763TR	159930	TV	36
GFR765HR	159930	TV	36
GFR765LR	159930	TV	36
GFR768SR	159930	TV	36
GFR780BR	159930	TV	36
GFR780SR	159930	TV	36
GFR785HR	159930	TV	36
GFR788SR	159930	TV	36
GFR938SR	159930	TV	36
GFR940SR	159930	TV	36
GFR942SR	159930	TV	36
GFR946TR	159930	TV	36
GFR948SR	159930	TV	36
GGC651TR	156516	TV	36
GGC655HR	156516	TV	36
GGC655LR	156516	TV	36
GGC659SR	156516	TV	36
GGR2029S	159930	TV	36
GGR2030T	159930	TV	36
GGR2033B	159930	TV	36
GGR2033T	159930	TV	36
GGR2035H	159930	TV	36
GGR2035L	159930	TV	36
GGR2038S	159930	TV	36
GGR2050S	159930	TV	36
GGR2058S	159930	TV	36
GGR2074S	159930	TV	36
GGR2076S	159930	TV	36
GGR2078S	159930	TV	36
GGR2090A	159930	TV	36
GGR2098S	159930	TV	36
GGR651TR	156516	TV	36
GGR655HR	156516	TV	36
GGR655LR	156516	TV	36
GGR659SR	156516	TV	36
GGR682TR	156516	TV	36
GGR686SR	156516	TV	36
GJR2025H	159930	TV	36
GJR2028T	159930	TV	36
GJR2029P	159930	TV	36
GJR641PR	156516	TV	36
GJR649PR	156516	TV	36
GJR651TR	156516	TV	36
GJR653PR	156516	TV	36
GJR655HR	156516	TV	36
GJR655LR	156516	TV	36
GJR659PR	156516	TV	36
GJR661TR	159930	TV	36
GJR669PR	159930	TV	36
GJR672TR	159930	TV	36
GJR674TR	159930	TV	36
GJR677PR	159930	TV	36
GJR679PR	159930	TV	36
GJR684TR	159930	TV	36
GJR691TR	159930	TV	36
GJR695HR	159930	TV	36
GJR695LR	159930	TV	36
GJR699PR	159930	TV	36
GKR641TR	156516	TV	36
GKR645HR	156516	TV	36
GKR647TR	156516	TV	36
GKR649PR	156516	TV	36
GKR651TR	156516	TV	36
GKR661TR	156516	TV	36
GKR671TR	159930	TV	36
GKR673TR	159930	TV	36
GKR681TR	159930	TV	36
GKR685HR	159930	TV	36
GKR685LR	159930	TV	36
GKR689PR	159930	TV	36
GKR693TR	159930	TV	36
GKR761TR	159802	TV	36
GKR769PR	159802	TV	36
GKR772TR	159802	TV	36
GKR774TR	159802	TV	36
GKR777PR	159802	TV	36

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
GKR779PR	159802	TV	36
GKR781TR	159802	TV	36
GKR789PR	159802	TV	36
GKR791TR	159802	TV	36
GKR793TR	159802	TV	36
GKR795HR	159802	TV	36
GKR795LR	159802	TV	36
GKR797TR	159802	TV	36
GKR799PR	159802	TV	36
GLR2530T	159802	TV	36
GLR2531E	159802	TV	36
GLR2538P	159802	TV	36
GLR631TR	156516	TV	36
GLR641TR	156516	TV	36
GLR645HR	156516	TV	36
GLR649PR	156516	TV	36
GLR651TR	159930	TV	36
GLR659PR	159930	TV	36
GLR661TR	159802	TV	36
GLR663TR	159802	TV	36
GLR665TR	159802	TV	36
GLR667ER	159802	TV	36
GLR671PR	159802	TV	36
GLR673P	159802	TV	36
GLR675PR	159802	TV	36
GLR679HR	159802	TV	36
GLR681TR	159802	TV	36
GLR683ER	159802	TV	36
GLR683TR	159802	TV	36
GLR685HR	159802	TV	36
GLR685LR	159802	TV	36
GLR689PR	159802	TV	36
GLR891TR	180339	TV	37
GLR895HR	180339	TV	37
GLR895LR	180339	TV	37
GLR899PR	180339	TV	37
GMR641TR	156516	TV	36
GMR645HR	156516	TV	36
GMR649PR	156516	TV	36
GMR651TR	173916	TV	36
GMR655HR	173916	TV	36
GMR659PR	173916	TV	36
GMR811PR	173916	TV	36
GMR815HR	173916	TV	36
GMR815L	173916	TV	36
GMR819PR	173916	TV	36
GMR821TR	173916	TV	36
GMR823TR	173916	TV	36
GMR825TR	173916	TV	36
GMR831PR	173916	TV	36
GMR833PR	173916	TV	36
GMR891TR	180339	TV	37
GMR893ER	180339	TV	37
GMR895HR	180339	TV	37
GMR899PR	180339	TV	37
GPR2630T1	179472	TV	38
GPR2630T3	179472	TV	38
GPR2631T1	179472	TV	38
GPR2631T2	179472	TV	38
GPR2635T1	179472	TV	38
GPR2635T2	179472	TV	38
GPR2639P2	179472	TV	38
GPR2641T1	179472	TV	38
GPR2641T2	179472	TV	38
GPR2643P1	179472	TV	38
GPR2643P2	179472	TV	38
GPR2645T1	179472	TV	38
GPR2645T2	179472	TV	38
GPR2649P1	179472	TV	38
GPR2649P2	179472	TV	38
GPR2649P4	179472	TV	38
GPR2653E1	179472	TV	38
GPR2653E2	179472	TV	38
GPR2740T1	177994	TV	38
GPR2740T2	177994	TV	38
GPR2743E1	177994	TV	38
GPR2743E2	177994	TV	38
GPR2747T1	177994	TV	38
GPR2747T2	177994	TV	38
GPR2750P1	177994	TV	38
GPR2750P2	177994	TV	38
GPR2751T1	177994	TV	38
GPR2751T2	177994	TV	38
GPR2755H1	177994	TV	38
GPR2755H2	177994	TV	38
GPR2758P1	177994	TV	38
GPR2758P2	177994	TV	38
GPR2760T1	177994	TV	38
GPR2760T2	177994	TV	38
GPR2790E1	177994	TV	38
GPR2790E2	177994	TV	38
GPR2798E1	177994	TV	38
GPR2798E2	177994	TV	38
GPR791TR1	173916	TV	36
GPR791TR2	173916	TV	36
GPR795FR1	173916	TV	36
GPR795FR2	173916	TV	36
GPR799PR1	173916	TV	36
GPR821TR1	180339	TV	37
GPR821TR2	180339	TV	37
GPR823TR1	180339	TV	37
GPR823TR2	180339	TV	37
GPR825TR1	180339	TV	37
GPR825TR2	180339	TV	37
GPR841PR1	180339	TV	37
GPR841PR2	180339	TV	37

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
GPR845HR1	180339	TV	37
GPR845HR2	180339	TV	37
GPR849PR1	180339	TV	37
GPR849PR2	180339	TV	37
GRD15141F01	250097	TV	37
GRD15272FE1	250097	TV	37
GRD33G2	232675	DSS	46
GRD33G3	232676	DSS	46
GS312G3A	232675	DSS	46
GS323G3A	232676	DSS	46
GS728DR	143725	TV	35
GS728SR	143725	TV	35
GU660WR	143725	TV	35
GU760WR	143725	TV	35
GU764LR	143725	TV	35
GU768SR	143725	TV	35
GU900 SERIES	188206	TV	35
GXD3362A	232110	DSS	46
GXR651TR1	173916	TV	36
GXR651TR2	173916	TV	36
GXR659PR1	173916	TV	36
GXR659PR2	173916	TV	36
HF100	58A15481	AUDIO	44
HF105	58A15481	AUDIO	44
HF108	58A15481	AUDIO	44
ISK25701U01	250097	TV	37
J20010DW	210491	TV	37
J20011DW	210491	TV	37
J20100DWN02	194584	TV	37
J20100DWN02	198537	TV	37
J20100DWN04	194584	TV	37
J20100DWN04	198537	TV	37
J20100GGN04	194584	TV	37
J20100GGN04	198536	TV	37
J20100GGN04	198537	TV	37
J20101DWN04	194584	TV	37
J20101DWN04	198536	TV	37
J20101DWN04	198537	TV	37
J20101GGN02	194584	TV	37
J20101GGN02	198536	TV	37
J20101GGN02	198537	TV	37
J20101GGN02	206012	TV	37
J20101GGN04	194584	TV	37
J20101GGN04	198536	TV	37
J20101GGN04	198537	TV	37
J20125DWN02	194584	TV	37
J20125DWN02	198537	TV	37
J20125DWN04	194584	TV	37
J20125DWN04	198537	TV	37
J20126DWN02	194584	TV	37
J20126DWN02	198536	TV	37
J20126DWN02	198537	TV	37
J20126DWN02	206012	TV	37
J20126DWN04	194584	TV	37
J20126DWN04	198536	TV	37
J20126DWN04	198537	TV	37
J20150DWN02	194584	TV	37
J20150DWN02	198537	TV	37
J20150DWN04	194584	TV	37
J20150DWN04	198537	TV	37
J20151DWN02	194584	TV	37
J20151DWN02	198536	TV	37
J20151DWN02	198537	TV	37
J20151DWN04	194584	TV	37
J20151DWN04	198536	TV	37
J20151DWN04	198537	TV	37
J20200DWN01	194584	TV	37
J20200DWN02	194584	TV	37
J20210DWNX1	198537	TV	37
J20220DWNX1	206012	TV	37
J20221DW	210492	TV	37
J20275DWN01	194584	TV	37
J20300BL	224412	TV	55
J20300BLFB1	218712	TV	46
J20300BLJU1	218712	TV	46
J20300BLJX1	218712	TV	46
J20310BJX1	218712	TV	46
J20310BL	224412	TV	55
J20310BLFB1	218712	TV	46
J20310BLJU1	218712	TV	46
J20330MG	224413	TV	55
J20521DW	210492	TV	37
J20525DWN01	194584	TV	37
J20530BL	224413	TV	55
J25220GGFC1	206012	TV	37
J25330BLFE1	227803	TV	54
J25330BLJX1	227803	TV	54
J26750HPN01	177994	TV	38
JKR985RR	159802	TV	36
JMR984WR	173916	TV	36
JPR960ER3	173916	TV	36
JPR960HR3	173916	TV	36
JPR960WR1	173916	TV	36
JPR960WR2	173916	TV	36
JPR960WR3	173916	TV	36
JPR960YR1	173916	TV	36
JPR966NR3	173916	TV	36
JPR966WR1	173916	TV	36
JPR966WR2	173916	TV	36
JPR966WR3	173916	TV	36
JPR966YR2	173916	TV	36
JPR968AR1	173916	TV	36
JPR968BR2	173916	TV	36
JPR968ER2	173916	TV	36
JPR968ER3	173916	TV	36
JPR968GR3	173916	TV	36

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
JPR968HR2	173916	TV	36
JPR968HR3	173916	TV	36
JPR968MR1	173916	TV	36
JPR968MR3	173916	TV	36
JPR968NR3	173916	TV	36
JPR968TR1	173916	TV	36
JPR968TR3	173916	TV	36
JPR968WR1	173916	TV	36
JPR968WR2	173916	TV	36
JPR968WR3	173916	TV	36
JPR984WR2	173916	TV	36
LDR300	202273	VDISC	39
LDR305	206821	VDISC	39
LDR307	218791	VDISC	52
LDR310	211014	VDISC	39
LDR400	211016	VDISC	39
LDR500	211016	VDISC	39
LDR600	211016	VDISC	39
LDR610	221296	VDISC	52
LDR611	221365	VDISC	40
M14000	226107	TV	46
M14001	226107	TV	46
M14001M15	226107	TV	46
M1400M15	226107	TV	46
M20303BL	226107	TV	46
M20GT326	226100	TV	46
M21500	221133	TV	47
M27500	221133	TV	47
M29500	221132	TV	47
M52732EG1	233063	TV	54
MB2020M	58A18340	AUDIO	44
MFR318R	156516	TV	36
MFR378R	156516	TV	36
MFR418R	156516	TV	36
MFR419R	159930	TV	36
MFR561R	156516	TV	36
MFR565R	156516	TV	36
MFR579R	156516	TV	36
MFR588R	159930	TV	36
MFR589R	159930	TV	36
MPT200A	177994	TV	38
MSR250A	177994	TV	38
MX20GT324	226100	TV	46
NC1010	238905	N/C	57
NC1020	238905	N/C	57
P42000T	179472	TV	38
P46000T	177994	TV	38
P46100TND03	211687	TV	45
P46101WKCG1	211687	TV	45
P46101WKDG1	211687	TV	45
P46150WKN01	211687	TV	45
P46150WKN02	211687	TV	45
P46151WKCG1	212233	TV	45
P46151WKDG1	212233	TV	45
P46159WKCG1	212233	TV	45
P46159WKNG1	212233	TV	45
P46720BA	224262	TV	47
P46720LV	224262	TV	47
P46725SK	224262	TV	47
P46725WK	224262	TV	47
P46726BA	224262	TV	47
P46726BADX1	224262	TV	47
P46729BA	212233	TV	45
P46730WK	212234	TV	45
P46731AT	212234	TV	45
P46732BA	212234	TV	45
P46733AT	221115	TV	55
P46733AT	221115	TV	55
P46734BA	221115	TV	55
P46734BA	221115	TV	55
P46738AT	212234	TV	45
P46770CK	212233	TV	45
P46771AT	221115	TV	55
P46771SK	221115	TV	55
P46810LVLG2	232306	TV	54
P46811LVLG2	232306	TV	54
P46812BLLG2	232306	TV	54
P46813BLLG1	232306	TV	54
P46813BLLG2	232306	TV	54
P49740BG	221115	TV	55
P50830	238544	TV	NO PIX
P52100EB	212233	TV	45
P52101EB	221115	TV	55
P52150CPD01	211687	TV	45
P52150CPD02	211687	TV	45
P52150CPN01	211687	TV	45
P52150CPN02	211687	TV	45
P52151WKCG1	212233	TV	45
P52151WKDG1	212233	TV	45
P52720BA	224262	TV	47
P52720LV	224262	TV	47
P52725SK	224262	TV	47
P52730CK	212233	TV	45
P52730CKLG1	233063	TV	54
P52731WK	212234	TV	45
P52738WK	212234	TV	45
P52753AT	212233	TV	45
P52754AT	221115	TV	55
P52755BA	221115	TV	55
P52756SB	212233	TV	45
P52757SB	221115	TV	55
P52770EB	212233	TV	45
P52771AT	221115	TV	55
P52810LV	232306	TV	54
P52830BL	238544	TV	NO PIX
P56740BG	221115	TV	55

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
P56812B11G2	232306	TV	54
P56830BL	238544	TV	NO PIX
P60100EB	212233	TV	45
P60101EB	221115	TV	55
P60752EB	225841	TV	55
P60755AT	221115	TV	55
P60755EB	221115	TV	55
P60756BA	221115	TV	55
PA110-10B	58A16512	AUDIO	49
PA120-101B	58A16603	AUDIO	44
PA3400F	218479	AUDIO	NO PIX
PA3600F	218479	AUDIO	NO PIX
PA3700F	218479	AUDIO	NO PIX
PPR400P	179472	TV	38
PRD8630	232677	DSS	46
PRO2000D	237697	CAM	57
PRO807	211026	CAM	39
PRO808	217495	CAM	51
PRO808A	223234	CAM	50
PRO815	202543	CAM	39
PRO820	202543	CAM	39
PRO825	202543	CAM	39
PRO830	218501	CAM	50
PRO840	218501	CAM	50
PRO842	233195	CAM	51
PRO843	225814	CAM	51
PRO844	221363	CAM	51
PRO845	224175	CAM	50
PRO846	221363	CAM	51
PRO847	233195	CAM	51
PRO850	202543	CAM	39
PRO852	233195	CAM	51
PRO854	233195	CAM	51
PRO860	202543	CAM	39
PRO865	202543	CAM	39
PRO867	218502	CAM	50
PRO870	211026	CAM	39
PRO880HB	202543	CAM	39
PRO883HB	215769	CAM	50
PRO884HB	221363	CAM	51
PRO930	218502	CAM	50
PRO932	221363	CAM	51
PRO942	221363	CAM	51
PRO950HB	233581	CAM	56
PROV2000D	235827	CAM	NO PIX
PROV712	237697	CAM	57
PROV714	237697	CAM	57
PROV730	239226	CAM	50
PROV742	239226	CAM	50
PROV950HB	237697	CAM	57
PS20105	221114	TV	47
PS20110F01	197944	TV	38
PS20110F02	197944	TV	38
PS20111FB1	212238	TV	45
PS20111NB1	212238	TV	45
PS20112	212236	TV	45
PS27108	221113	TV	47
PS27110W01	197944	TV	38
PS27110W02	197944	TV	38
PS27111NX1	212238	TV	45
PS27112	212236	TV	45
PS27113	224266	TV	47
PS27113FB1	224266	TV	47
PS27113FB2	224266	TV	47
PS27113JX1	224266	TV	47
PS27113JX1	224266	TV	47
PS27115	236123	TV	NO PIX
PS27120W01	197944	TV	38
PS27120W02	197944	TV	38
PS27121NE1	206799	TV	43
PS27121NX1	206799	TV	43
PS27122	212236	TV	45
PS27123	224265	TV	56
PS27123FB1	224265	TV	56
PS27123JX1	224265	TV	56
PS27125	238545	TV	54
PS27150W01	197944	TV	38
PS27150W02	197944	TV	38
PS27151NX1	206799	TV	43
PS27152	212236	TV	45
PS27153	224264	TV	47
PS27153FX1	224264	TV	47
PS27153JX1	224264	TV	47
PS27160	221112	TV	47
PS31108	221113	TV	47
PS31122	212236	TV	45
PS31150F01	197944	TV	38
PS31150F02	197944	TV	38
PS31151NM1	206799	TV	43
PS31160	221112	TV	47
PS32108	221113	TV	47
PS32125	238545	TV	54
PS32130	221112	TV	47
PS32160	221112	TV	47
PS34190	210824	TV	49
PS35122	212236	TV	45
PS35123	224265	TV	56
PS35130	221112	TV	47
PS35130FM1	221112	TV	47
PS35130FM1	221245	TV	53
PS35150NM1	206799	TV	43
PS35152	212236	TV	45
PS35153	224264	TV	47
PS35160	221112	TV	47
PS35160FM1	221112	TV	47
PS35160FM1	221245	TV	53

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
PS35160JX1	221112	TV	47
PS35160JX1	221245	TV	53
PS35182	212236	TV	45
PS35190	225617	TV	55
PS35622	212236	TV	45
PS35623	224265	TV	56
PS35650L01	197944	TV	38
PS35650L02	197944	TV	38
PS35651LG1	206799	TV	43
PS35651LM1	206799	TV	43
PS35652LG1	206799	TV	43
PS35653	212236	TV	45
PS35660	221112	TV	47
PS35660LM1	221112	TV	47
PS35660LM1	221245	TV	53
PS35680	212236	TV	45
PS35682	212236	TV	45
PS35690	225617	TV	55
PS36123	224265	TV	56
PS36125	238545	TV	54
PS36127	231541	TV	47
PS36130	231541	TV	47
PS36161	231541	TV	47
PS36190	233066	TV	55
PS36625	238545	TV	54
PS52650	212236	TV	45
PS52652	212236	TV	45
PS52660	221112	TV	47
PS52662	221112	TV	47
PS52682	212236	TV	45
PS52690	225617	TV	55
PS56670LG1	238545	TV	54
PS60682	212236	TV	45
PS60690	225617	TV	55
PS61670LG1	238545	TV	54
PS80690	225617	TV	55
PS84560B	232576	DSS	NO PIX
PS8600P	233997	DVD	NO PIX
PSC10	220091	CAM	50
PSC15C	218859	CAM	50
PSC20HB	220091	CAM	50
PSC24C	221285	CAM	51
PSC24SC	224594	CAM	51
PSLD40	203538	VDISC	39
PSLD41	211017	VDISC	39
PSLD43	211017	VDISC	39
PSLD45	221297	VDISC	40
PSLD46	221368	VDISC	40
PSVR57	232843	VCR	56
PSVR60	210858	VCR	49
PSVR61	210858	VCR	49
PSVR62	221324	VCR	53
PSVR65	232843	VCR	56
PSVR80	207089	VCR	40
PSVR81	210859	VCR	40
PSVR82	221325	VCR	53
PSVR83	234379	VCR	54
PSVR84	221402	VCR	54
RC2050N	58A15481	AUDIO	44
RC5200P	237001	DVD	57
RC5500P	233026	DVD	54
RKD5202	54055	AUDIO	43
RP6001	221579	AUDIO	50
RP6001A	221579	AUDIO	50
RP7929	54057	AUDIO	51
RP7958A	54022	AUDIO	NO PIX
RP7977A	58A20049	AUDIO	51
RP7981	58A15059	AUDIO	44
RP7984A	58A26322	AUDIO	NO PIX
RP7985A	58A20304	AUDIO	51
RP8030	225375	AUDIO	53
RP8055C	233055	AUDIO	57
RP8550	EA58X0001	AUDIO	43
RP8560	54001	AUDIO	43
RP8563	54042	AUDIO	43
RP8593	220294	AUDIO	43
RP8675	58A18205	AUDIO	42
RP9100A	238535	AUDIO	43
RP9115A	238535	AUDIO	43
RP9300A	238536	AUDIO	43
RP9318A	240964	AUDIO	43
RP9320	232094	AUDIO	43
RP9325A	58A28021	AUDIO	NO PIX
RP9340	232094	AUDIO	43
RP9345	241020	AUDIO	NO PIX
RP9360	241020	AUDIO	NO PIX
RP9380A	244875	AUDIO	NO PIX
RP9515A	239249	AUDIO	43
RP9520A	238435	AUDIO	55
RP9520TKB	238435	AUDIO	55
RP9540A	238435	AUDIO	55
RP9555A	238435	AUDIO	55
RP9560A	238435	AUDIO	55
RP9750	58A18708	AUDIO	44
RP9753	221949	AUDIO	52
RP9780	58A19754	AUDIO	44
RP9793	221750	AUDIO	44
RP9900	233998	AUDIO	55
RP9950	233998	AUDIO	55
RP9965	238534	AUDIO	NO PIX
RP9975	233998	AUDIO	55
RV2160F	58A19107	AUDIO	45
RV3540A	58A19186	AUDIO	44
RV3650	216978	AUDIO	45
RV3681F	216978	AUDIO	45
RV3695	233998	AUDIO	55

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
RV3791F	221182	AUDIO	53
RV3798	233998	AUDIO	55
RV9970	233998	AUDIO	55
RVM2050N01	177994	TV	38
RVM2630F01	177994	TV	38
RVM2650C01	177994	TV	38
RVM2730N01	177994	TV	38
RVM2731N01	177994	TV	38
RVM2750C01	177994	TV	38
RVM2769C01	177994	TV	38
RVM46700T	177994	TV	38
S20515AK2	173916	TV	36
S20520WNF01	187987	TV	38
S20520WNN01	187987	TV	38
S20521WNF01	187986	TV	38
S20522WNFB1	179472	TV	38
SA20200	226107	TV	46
SA25000	226107	TV	46
T13005BK	218882	TV/VCR	53
T13060GY	221371	TV/VCR	57
T13065BC	233543	TV/VCR	NO PIX
T13065BCF01	235442	TV/VCR	55
T13070WH	221374	TV/VCR	56
T19060GY	233543	TV/VCR	NO PIX
T19060GYF01	235442	TV/VCR	55
T20000BK	218882	TV/VCR	53
T20005BK	218882	TV/VCR	53
T20010BK	221233	TV/VCR	53
T20010EB	221233	TV/VCR	53
T20060GY	221348	TV/VCR	52
T20065BC	221348	TV/VCR	52
T25001GY	221359	TV/VCR	53
T25003BC	228892	TV/VCR	53
T25061GY	239118	TV/VCR	NO PIX
T27060GY	221348	TV/VCR	52
T27265BC	221348	TV/VCR	52
TPT2039A01	182727	TV	36
TPT2039B01	182727	TV	36
TPT2039C01	182727	TV	36
TU3700F	218479	AUDIO	NO PIX
TXT2540A01	173916	TV	36
TXT2540A02	173916	TV	36
VG2000	233148	VCR	52
VG2003	206026	VCR	41
VG2007	206031	VCR	42
VG2009	210791	VCR	49
VG2010	193000	VCR	44
VG2011	210791	VCR	49
VG2011A	210791	VCR	49
VG2013	210791	VCR	49
VG2014	210791	VCR	49
VG2016	206040	VCR	41
VG2019	217661	VCR	49
VG2020	217661	VCR	49
VG2021	218792	VCR	47
VG2030	221290	VCR	52
VG2030A	221345	VCR	52
VG2032	221345	VCR	52
VG2035	221255	VCR	47
VG2040	238096	VCR	NO PIX
VG2053	229652	VCR	53
VG2056	233453	VCR	56
VG4000	233148	VCR	52
VG4000N	233148	VCR	52
VG4001	206026	VCR	41
VG4005	206031	VCR	42
VG4009	206026	VCR	41
VG4010	210791	VCR	49
VG4011	210791	VCR	49
VG4012	206026	VCR	41
VG4013	210791	VCR	49
VG4014	210848	VCR	47
VG4016	206031	VCR	42
VG4018	207086	VCR	41
VG4019	210864	VCR	48
VG4020	217650	VCR	47
VG4021	217650	VCR	47
VG4025	219009	VCR	47
VG4029	219018	VCR	47
VG4030	221290	VCR	52
VG4030A	221345	VCR	52
VG4032	221276	VCR	52
VG4033	221276	VCR	52
VG4035	221256	VCR	48
VG4036	221313	VCR	48
VG4038	225290	VCR	48
VG4039	225290	VCR	48
VG4040	238096	VCR	NO PIX
VG4053	221391	VCR	53
VG4055	221342	VCR	51
VG4056	233452	VCR	56
VG4058	221426	VCR	57
VG4059	234011	VCR	52
VG4061	238861	VCR	55
VG4200	206026	VCR	41
VG4202	206026	VCR	41
VG4205	217650	VCR	47
VG4210	219009	VCR	47
VG4215	218794	VCR	47
VG4216	206031	VCR	42
VG4217	210848	VCR	47
VG4218	206351	VCR	42
VG4219	210856	VCR	47
VG4230	221276	VCR	52
VG4230A	221345	VCR	52
VG4233	221276	VCR	52

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
VG4235	221256	VCR	48
VG4238	225290	VCR	48
VG4239	225290	VCR	48
VG4240	238096	VCR	NO PIX
VG4253	221345	VCR	52
VG4255	221313	VCR	48
VG4256	233148	VCR	52
VG4256	233148	VCR	52
VG4257	233451	VCR	53
VG4258	221313	VCR	48
VG4259	234011	VCR	52
VG4261	237931	VCR	52
VG4267	238513	VCR	52
VG7500	192407	VCR	39
VG7510	190129	VCR	44
VG7515	193000	VCR	44
VG7520	190129	VCR	44
VG7575	193000	VCR	44
VG7610	194963	VCR	41
VG7615	193000	VCR	44
VG7620	194963	VCR	41
VG7675	193000	VCR	44
VG7685	194963	VCR	41
VG7720	190129	VCR	44
VG7725	190129	VCR	44
VG7775	190129	VCR	44
VG7785	191395	VCR	44
VG7795	192018	VCR	44
VG7910	194963	VCR	41
VG7920	194963	VCR	41
VG7925	194963	VCR	41
VG7975	194963	VCR	41
VG7980	194963	VCR	41
VG7985	194963	VCR	41
VGM2005S	159930	TV	36
VGM2022T	159930	TV	36
VGM2023S	159930	TV	36
VGM2079B	159930	TV	36
VGM2080S	159930	TV	36
VGM300	221406	VCR	54
VGM310	239261	VCR	55
VGN350	221406	VCR	54
VGP170	156767	VCR	36
VJM360SR	156516	TV	36
VJP825	156767	VCR	36
VJP900	156767	VCR	36
VJT275	159935	VCR	50
VJT700	156767	VCR	36
VKT275	164133	VCR	50
VKT300	156767	VCR	36
VKT310	156767	VCR	36
VKT326	156767	VCR	36
VKT435	156767	VCR	36
VKT550	156767	VCR	36
VLT260	156767	VCR	36
VLT270	156767	VCR	36
VLT375	164133	VCR	50
VPT200	193024	VCR	39
VPT390	182879	VCR	39
VPT391	182879	VCR	39
VPT392	182879	VCR	39
VPT393	182879	VCR	39
VPT395	182879	VCR	39
VPT396	182879	VCR	39
VPT397	182879	VCR	39
VPT398	182879	VCR	39
VPT630	182879	VCR	39
VPT640HF	182879	VCR	39
VR250	193024	VCR	39
VR270	191379	VCR	39
VR273	201662	VCR	41
VR273A	201662	VCR	41
VR275	191379	VCR	39
VR280	192949	VCR	44
VR285	192949	VCR	44
VR290	210846	VCR	44
VR291	197871	VCR	39
VR293	201662	VCR	41
VR295	210846	VCR	44
VR300	193024	VCR	39
VR301	210846	VCR	44
VR319	210846	VCR	44
VR320	210846	VCR	44
VR321	218979	VCR	48
VR323	218506	VCR	49
VR324	221312	VCR	48
VR327	225291	VCR	52
VR327A	221347	VCR	52
VR329	221302	VCR	53
VR330	206028	VCR	42
VR332	221319	VCR	48
VR334	206812	VCR	41
VR335	206028	VCR	42
VR337	221347	VCR	52
VR338	221302	VCR	53
VR340	201662	VCR	41
VR341	201662	VCR	41
VR343	201662	VCR	41
VR344N	237698	VCR	52
VR345	206028	VCR	42
VR348	233456	VCR	56
VR450	201662	VCR	41
VR451	201662	VCR	41
VR452	201662	VCR	41
VR470	201662	VCR	41
VR475	201662	VCR	41

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
VR480	206812	VCR	41
VR490	196614	VCR	41
VR495	196614	VCR	41
VR500	206029	VCR	42
VR501	218232	VCR	52
VR501A	221291	VCR	52
VR502	218744	VCR	52
VR503	221291	VCR	52
VR503A	221347	VCR	52
VR504	221282	VCR	49
VR505	206029	VCR	42
VR506	210847	VCR	48
VR506A	218503	VCR	48
VR507	221303	VCR	53
VR508	221347	VCR	52
VR510	210849	VCR	48
VR510A	218505	VCR	48
VR511	206812	VCR	41
VR512	206812	VCR	41
VR512A	210843	VCR	49
VR513	221373	VCR	52
VR514	221303	VCR	53
VR515	206029	VCR	42
VR516	212933	VCR	48
VR517	221303	VCR	53
VR518	239040	VCR	55
VR519	237698	VCR	52
VR520	201662	VCR	41
VR521	196614	VCR	41
VR522	221303	VCR	53
VR523	201662	VCR	41
VR526	210850	VCR	48
VR526A	218504	VCR	48
VR526B	221282	VCR	49
VR528	221300	VCR	53
VR529	238056	VCR	NO PIX
VR530	218103	VCR	48
VR531	238095	VCR	NO PIX
VR534	218393	VCR	53
VR535	201662	VCR	41
VR536	210857	VCR	48
VR537	218504	VCR	48
VR538	225529	VCR	53
VR539	225529	VCR	53
VR541	221382	VCR	54
VR550	210850	VCR	48
VR560	231545	VCR	55
VR561	238510	VCR	52
VR562	221373	VCR	52
VR564	239260	VCR	54
VR595	201662	VCR	41
VR600HF	201662	VCR	41
VR601AHF	221291	VCR	52
VR601HF	218232	VCR	52
VR603AHF	221347	VCR	52
VR603HF	221291	VCR	52
VR604HF	221282	VCR	49
VR605HF	221347	VCR	52
VR609HF	233454	VCR	53
VR610HF	221303	VCR	53
VR611HF	239040	VCR	55
VR612HF	237698	VCR	52
VR613HF	221373	VCR	52
VR615HF	239040	VCR	55
VR617HF	221301	VCR	54
VR618HF	233583	VCR	56
VR619HF	221373	VCR	52
VR620HF	206812	VCR	41
VR621HF	221283	VCR	48
VR625HF	206812	VCR	41
VR626HF	239040	VCR	55
VR628HF	239259	VCR	54
VR630HF	201662	VCR	41
VR631HF	238095	VCR	NO PIX
VR635HF	201662	VCR	41
VR640HF	201662	VCR	41
VR643HF	239040	VCR	55
VR644HF	239259	VCR	54
VR652HF	231545	VCR	55
VR654HF	238510	VCR	52
VR657HF	210849	VCR	48
VR658HF	218505	VCR	48
VR660HF	206029	VCR	42
VR662HF	212934	VCR	48
VR662HF	212934	VCR	48
VR663HF	218103	VCR	48
VR664HF	218504	VCR	48
VR665HF	206350	VCR	42
VR667HF	210857	VCR	48
VR671HF	206812	VCR	41
VR672HF	221301	VCR	54
VR673HF	221300	VCR	53
VR674HF	232311	VCR	54
VR674HF	232312	VCR	54
VR674HF	225529	VCR	53
VR675HF	201662	VCR	41
VR677HF	221386	VCR	54
VR680HF	206350	VCR	42
VR681HF	221403	VCR	53
VR682HF	210857	VCR	48
VR683HF	218393	VCR	53
VR684HF	225529	VCR	53
VR685HF	207089	VCR	40
VR688HF	231544	VCR	55
VR689HF	221321	VCR	55
VR690HF	210850	VCR	48

Remote Controls Model Number Cross Reference

MODEL NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
VR691HF	239259	VCR	54
VR696HF	207089	VCR	40
VR700HF	206812	VCR	41
VR720HF	218507	VCR	49
VR730HF	231546	VCR	55
VR740HF	202236	VCR	40
VR800HF	213721	VCR	48
X13101GS	226110	TV	45
X13135EBC01	192108	TV	37
X13135EBC02	192108	TV	37
X13135EBC03	192108	TV	37
X13135EBF01	192108	TV	37
X13135EBF02	192108	TV	37
X13135EBF03	192108	TV	37
X13137WNF01	192108	TV	37
X13137WNF02	192108	TV	37
X13137WNF03	192108	TV	37
X13152GSC01	197031	TV	37
X13152GSC03	197031	TV	37
X13152GSF01	197031	TV	37
X13152GSF03	197031	TV	37
X13154GSC01	197031	TV	37
X13154GSC03	197031	TV	37
X13154GSF01	197031	TV	37
X13154GSF03	197031	TV	37
X19150SG	226110	TV	45
X20101GS	226110	TV	45
X20102SG	226110	TV	45
X20102SGJX3	226551	TV	54
X20102SGJX4	226551	TV	54
X20102SGTX3	226551	TV	54
X20102SGTX4	226551	TV	54
X20103SGJX1	226551	TV	54
X20131GS	226110	TV	45
X20132SG	226110	TV	45
X20161EBA01	192108	TV	37
X20161EBA02	192108	TV	37
X20161EBA04	192108	TV	37
X20161EBN01	192108	TV	37
X20161EBN02	192108	TV	37
X20161EBN04	192108	TV	37
X20162GSA02	197031	TV	37
X20162GSA04	197031	TV	37
X20162GSN02	197031	TV	37
X20162GSN04	197031	TV	37
X20163WNA01	192108	TV	37
X20163WNA02	192108	TV	37
X20163WNA04	192108	TV	37
X20163WNN01	192108	TV	37
X20163WNN02	192108	TV	37
X20163WNN04	192108	TV	37
X20321EBF01	192108	TV	37
X20321EBN01	186344	TV	37
X20323WNF01	192108	TV	37
X20323WNN01	192108	TV	37
X20341EBF01	192108	TV	37
X20342GSF01	197031	TV	37
X20343WNF01	192108	TV	37
X25101GS	226110	TV	45
X25103SG	226110	TV	45
X25144GSFC1	197031	TV	37
X25144GSNC1	197031	TV	37
X25215WN	226107	TV	46
X25620WNN01	173916	TV	36
X25621EBN01	173916	TV	36
X26001EBF01	192108	TV	37
X26003WNF01	192108	TV	37
X26005EBF01	192108	TV	37
X26007WNF01	192108	TV	37
X26021EBF01	192108	TV	37
X26023WNF01	192108	TV	37
X26025EBF01	192108	TV	37
X26027WNF01	192108	TV	37
X26041TNC01	192108	TV	37
X26041TNK01	192108	TV	37
X26041TNW01	192108	TV	37
X26049TKK01	192108	TV	37
X26049TKW01	192108	TV	37
X26051TNM01	192108	TV	37
X26051TNY01	192108	TV	37
X26059TKM01	192108	TV	37
X26059TKY01	192108	TV	37
X26720WNN01	173916	TV	36
X26721EBN01	173916	TV	36

Remote Controls Photo Index

STOCK NUMBER	USED NUMBER	PAGE NUMBER
54001	AUDIO	43
54002	AUDIO	43
54003	AUDIO	43
54015	TV	49
54042	AUDIO	43
54055	AUDIO	43
54057	AUDIO	51
143365	TV	35
143366	TV	35
143367	TV	35
143725	TV	35
145143	TV	35
146382	TV	35
148047	TV	36
151351	TV	35
151532	TV	36
153337	TV	36
153357	TV	35
153835	TV	35
154084	TV	36
154282	TV	36
156273	TV	35
156388	TV	36
156516	TV	36
156532	TV	38
156767	VCR	36
159794	TV	38
159795	TV	38
159802	TV	36
159930	TV	36
159935	VCR	50
160534	VCR	36
160551	VCR	36
161333	VCR	50
163524	TV	36
164133	VCR	50
173301	VCR	38
173582	VCR	36
173916	TV	36
177423	VCR	39
177994	TV	38
179472	TV	38
180105	VCR	38
180339	TV	37
180393	TV	37
181044	TV	36
181045	TV	37
182701	VCR	39
182727	TV	36
182879	VCR	39
183496	TV	37
183504	TV	36
186343	TV	37
186344	TV	37
186345	TV	37
186698	VCR	39
187550	TV	38
187551	TV	38
187803	TV	37
187896	VCR	39
187986	TV	38
187987	TV	38
188130	VCR	43
188142	VCR	43
188206	TV	35
190129	VCR	44
191379	VCR	39
191395	VCR	44
191783	VCR	40
191876	VCR	40
192018	VCR	44
192108	TV	37
192188	VCR	40
192407	VCR	39
192426	VCR	39
192551	TV	38
192775	VCR	40
192949	VCR	44
193000	VCR	44
193024	VCR	39
193029	VCR	40
193348	VCR	40
194323	TV	35
194324	TV	35
194328	TV	35
194330	TV	35
194427	TV	36
194584	TV	37
194676	TV	38
194677	TV	38
194678	TV	38
194692	VCR	41
194962	VCR	41
194963	VCR	41
194964	VCR	41
196305	VCR	41
196367	VCR	41
196437	TV	38
196487	VCR	40
196614	VCR	41
197031	TV	37
197403	VCR	40
197871	VCR	39
197944	TV	38
197945	TV	38
197946	TV	38

Remote Controls Photo Index

STOCK NUMBER	USED NUMBER	PAGE NUMBER
198044	VCR	40
198511	TV	38
198512	TV	38
198514	VCR	41
198515	VCR	41
198535	VCR	41
198536	TV	37
198537	TV	37
199500	TV	35
199512	TV	36
200065	VCR	41
200130	VCR	40
200245	VCR	41
200456	TV	38
200458	TV	38
200711	VCR	42
200724	VCR	40
201168	VCR	42
201173	VCR	42
201200	VCR	41
201662	VCR	41
201865	TV	50
202153	VCR	40
202236	VCR	40
202273	AUDIO	39
202498	VCR	42
202543	VCR	39
203538	AUDIO	39
204602	TV	45
204603	TV	45
204605	TV	44
204940	TV	45
204944	TV	45
204960	TV	37
205501	TV	45
206012	TV	37
206024	VCR	41
206025	VCR	49
206026	VCR	41
206027	VCR	44
206028	VCR	42
206029	VCR	42
206030	VCR	44
206031	VCR	42
206040	VCR	41
206350	VCR	42
206351	VCR	42
206799	TV	43
206800	TV	43
206812	VCR	41
206821	AUDIO	39
206884	VCR	48
207086	VCR	41
207087	VCR	42
207088	VCR	48
207089	VCR	40
207133	VCR	40
207135	VCR	40
207136	TV	37
207872	TV	45
207873	TV	45
207874	TV	45
208545	AUDIO	39
208546	AUDIO	39
209739	VCR	49
210491	TV	37
210492	TV	37
210671	TV	45
210789	VCR	49
210790	VCR	49
210791	VCR	49
210824	TV	49
210826	TV	45
210837	VCR	49
210842	CAM	50
210843	VCR	49
210846	VCR	44
210847	VCR	48
210848	VCR	47
210849	VCR	48
210850	VCR	48
210856	VCR	47
210857	VCR	48
210858	VCR	49
210859	VCR	40
210864	VCR	48
210921	CAM	50
211014	AUDIO	39
211015	AUDIO	39
211016	AUDIO	39
211017	AUDIO	39
211026	CAM	39
211028	CAM	50
211681	TV	45
211682	TV	45
211683	TV	45
211686	TV	45
211687	TV	45
211688	TV	46
211689	TV	46
211690	TV	46
211792	TV	42
211829	TV	43
211878	TV	43
211948	VCR	43
212233	TV	45

Remote Controls Photo Index

STOCK NUMBER	USED NUMBER	PAGE NUMBER
212234	TV	45
212236	TV	45
212237	TV	45
212238	TV	45
212471	TV	45
212687	TV	56
212688	TV	56
212933	VCR	48
212934	VCR	48
213721	VCR	48
213722	TV	46
213723	TV	46
213724	TV	45
213725	TV	45
215419	TV	47
215420	TV	46
215769	CAM	50
216198	TV	49
216777	TV/VCR	51
216978	AUDIO	45
217012	CAM	50
217094	DSS	46
217095	DSS	46
217495	CAM	51
217650	VCR	47
217661	VCR	49
218103	VCR	48
218232	VCR	52
218393	VCR	48
218496	TV	53
218499	TV	46
218501	CAM	50
218502	CAM	50
218503	VCR	48
218504	VCR	48
218505	VCR	48
218506	VCR	49
218507	VCR	49
218537	CAM	50
218712	TV	46
218713	TV	46
218744	VCR	52
218791	VDISC	52
218792	VCR	47
218794	VCR	47
218853	AUDIO	41
218859	CAM	50
218882	TV/VCR	53
218979	VCR	48
219009	VCR	47
219018	VCR	47
220042	CAM	50
220091	CAM	50
220294	AUDIO	43
221102	DSS	46
221106	TV	46
221107	TV	46
221109	TV	56
221110	TV	56
221112	TV	47
221113	TV	47
221114	TV	47
221115	TV	55
221125	CAM	51
221132	TV	47
221133	TV	47
221143	TV	45
221182	TV	53
221185	CAM	50
221189	TV/VCR	53
221233	TV/VCR	53
221245	TV	53
221255	VCR	47
221256	VCR	48
221276	VCR	52
221282	VCR	49
221283	VCR	48
221285	CAM	51
221290	VCR	52
221291	VCR	52
221296	VDISC	52
221297	VDISC	40
221300	VCR	53
221301	VCR	54
221302	VCR	53
221303	VCR	53
221312	VCR	48
221313	VCR	48
221319	VCR	48
221321	VCR	55
221324	VCR	53
221325	VCR	53
221337	CAM	51
221342	VCR	51
221345	VCR	52
221347	VCR	52
221348	TV/VCR	52
221359	TV/VCR	53
221363	CAM	51
221365	VDISC	40
221368	VDISC	40
221371	TV/VCR	57
221373	VCR	52
221374	TV/VCR	56
221382	VCR	54
221386	VCR	54

Remote Controls Photo Index

STOCK NUMBER	USED NUMBER	PAGE NUMBER
221387	CAM	51
221391	VCR	53
221402	VCR	54
221403	VCR	53
221406	VCR	54
221415	CAM	51
221426	VCR	57
221579	AUDIO	50
221750	AUDIO	44
221933	VCR	49
221934	VCR	49
221949	AUDIO	52
222042	CAM	51
223234	CAM	50
224175	CAM	50
224262	TV	47
224264	TV	47
224265	TV	56
224266	TV	47
224266	TV	54
224412	TV	55
224413	TV	55
224594	CAM	51
225290	VCR	48
225291	VCR	52
225375	AUDIO	53
225436	AUDIO	43
225529	VCR	53
225617	TV	55
225760	TV/VCR	52
225814	CAM	51
225838	TV	55
225839	TV	55
225841	TV	55
226098	TV	45
226100	TV	46
226101	TV	46
226102	TV	46
226107	TV	46
226108	TV	46
226109	TV	45
226110	TV	45
226330	DSS	46
226419	TV	47
226551	TV	54
226725	TV	55
227803	TV	54
227834	TV	54
227835	TV	54
228003	TV	56
228004	TV	56
228005	TV	56
228006	TV	54
228007	TV	54
228892	TV/VCR	53
229652	VCR	53
230766	TV	57
231032	TV	57
231536	TV/VCR	56
231541	TV	47
231544	VCR	55
231545	VCR	55
231546	VCR	55
232094	AUDIO	43
232110	DSS	46
232306	TV	54
232311	VCR	54
232312	VCR	54
232347	TV/VCR	56
232672	DSS	46
232674	DSS	46
232675	DSS	46
232676	DSS	46
232677	DSS	46
232843	VCR	56
233026	TV	54
233055	AUDIO	57
233063	TV	54
233064	TV	47
233065	TV	47
233066	TV	55
233067	TV	56
233068	TV	56
233069	TV	56
233148	VCR	52
233195	CAM	51
233451	VCR	53
233452	VCR	56
233453	VCR	56
233454	VCR	53
233456	VCR	56
233544	TV	56
233581	CAM	56
233583	VCR	56
233998	AUDIO	55
234011	VCR	52
234379	VCR	54
234383	CAM	51
235442	TV/VCR	55
235443	TV	55
235827	CAM	51
237001	DVD	57
237697	CAM	57
237698	VCR	52
237931	VCR	52
238435	AUDIO	55

Remote Controls Photo Index

STOCK NUMBER	USED NUMBER	PAGE NUMBER
238510	VCR	52
238513	VCR	52
238535	AUDIO	43
238536	AUDIO	43
238545	TV	54
238861	VCR	55
238905	N/C	57
239040	VCR	55
239226	CAM	50
239249	AUDIO	43
239259	VCR	54
239260	VCR	54
239261	VCR	55
239271	MONITOR	57
240964	AUDIO	43
250097	TV	37
250099	TV	37
58A10047	AUDIO	49
58A13499	AUDIO	44
58A13968	AUDIO	44
58A15059	AUDIO	44
58A15475	AUDIO	50
58A15481	AUDIO	44
58A16270	AUDIO	44
58A16512	AUDIO	49
58A16514	AUDIO	49
58A16603	AUDIO	44
58A18205	AUDIO	42
58A18340	AUDIO	44
58A18708	AUDIO	44
58A19107	AUDIO	45
58A19186	AUDIO	44
58A19553	AUDIO	51
58A19754	AUDIO	44
58A20049	AUDIO	51
58A20304	AUDIO	51
58A20967	AUDIO	43
58A30577	AUDIO	51
58A30616	AUDIO	51
EA58X0001	AUDIO	43
EP62X0120	TV	35
EP62x0130	TV	35
EP62X0179	TV	42
EP62x0196	TV	35
EP62x0200	TV	35
EP62X0204	TV	42
EP62X0206	TV	42
EP62X0207	TV	42
EP62X0208	TV	42
EP62X0209	TV	42
EP62X0232	TV	42
EP62X0235	TV	42
EP62X0238	TV	42
EW62X0051	VCR	50
EW62X0160	VCR	50
EW62X0176	TV	43
EW62X0216	TV	42
EW62X0264	VCR	43

NOTES

NOTES

143367
CRK22A USE 188206

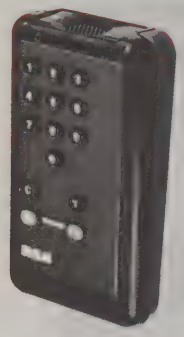

188206
CRK22A

EP62X0120
USE 194324

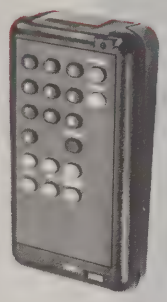

194324
8693.13

EP62X0196
USE 194324

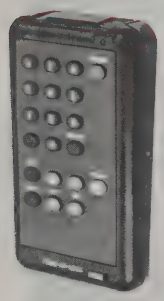

194328
8685.13 USE 194324

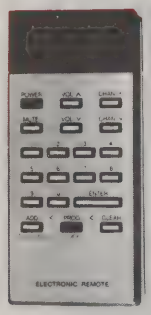

EP62X0200
73D225603GR16
USE 194324

143365 USE 143725
CRK19A, CRK19D

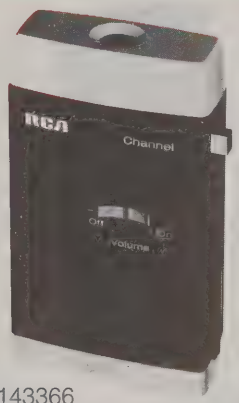

143366
CRK23A USE 143725

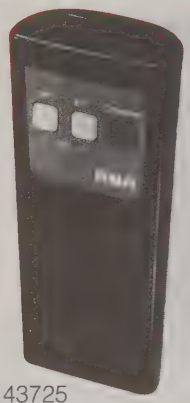

143725
CRK24E

EP62X130/140
USE 194323

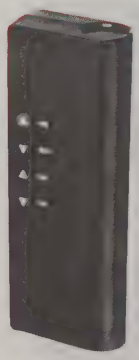

194323 USE 194330
8929.13

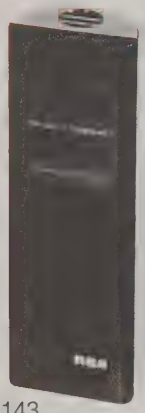

145143
CRK26A USE 194330

146382
CRK26E USE 194330

194330
CRK26E

153835
CRK29E USE 156516

156273
CRK29A USE 156516

151351
CRK29A USE 156516

199500
CRK29D
USE 156516

153337
CRK33A USE 156516

153357
CRK33B USE 156516

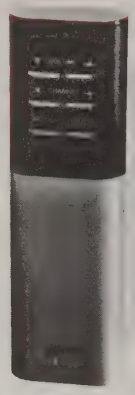

156516
CRK33H

173582
7031322 USE 156767

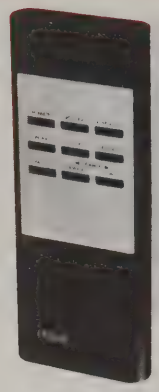

160534
5639748 USE 156767

160551
5639981 USE 156767

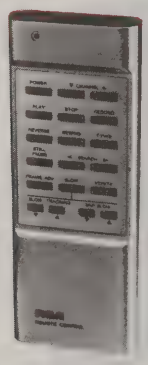

156767
5639743

154084
CRK28E USE 159930

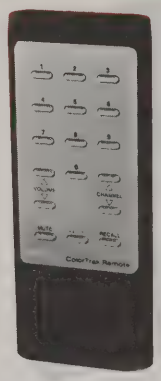

151532
CRK28A USE 159930

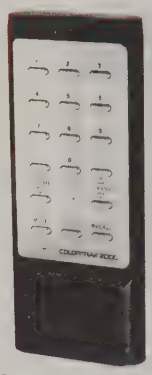

154282
CRK28D USE 159930

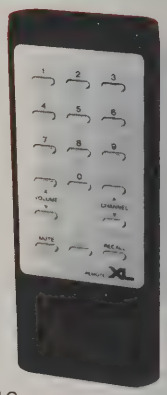

199512
CRK28C USE 159930

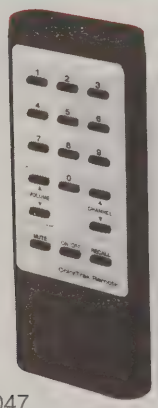

148047
CRK27A USE 159930

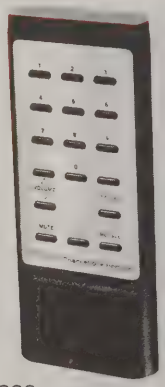

156388
CRK28G USE 159930

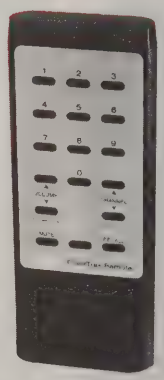

159930
CRK28J

159802
CRK37B



183504
CRK39X USE 182727



194427
CRK39Z USE 182727

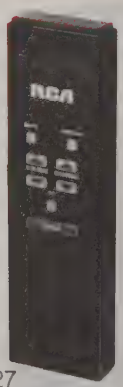

182727
CRK39U



181044
CRK39T USE 173916

163524
CRK39A USE 173916

173916
CRK39K

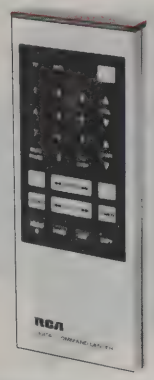

180339
CRK40A/B

197031
CRK53K USE 250097

204960
CRK53Q USE 250097

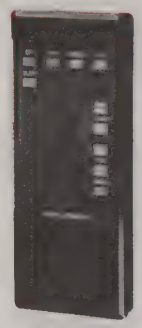

198536
CRKCPD USE 197031

186345
CRK53C

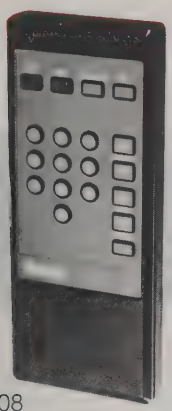

192108
CRK53D

198537
CRKCPE

206012
CRKCPG

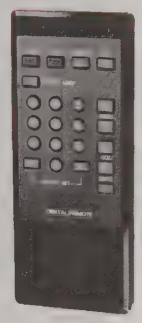

210491
CRKCPH USE 210492

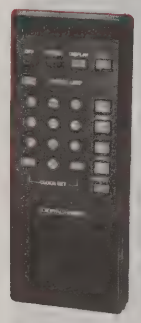

210492
CRKCPK

186344
CRK53B

250097
CRK53P

250099
CRK53M

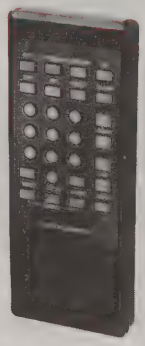

194584
CRKCPC USE 181045

186343
CRK53A

183496
CRK49E USE 187803

181045
CRK49D

207136
CRK50K USE 187803

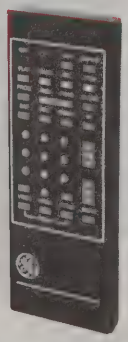

187803
CRK50C

180393
CRK50B USE 179472

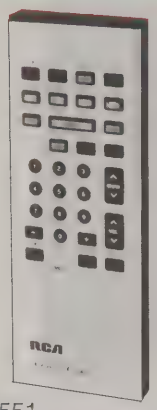

192551
CRK50E

196437
CRK50G

179472
CRK50A

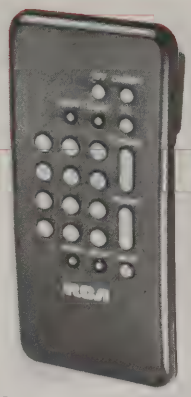

187986
CRK52A

200456
CRK52H

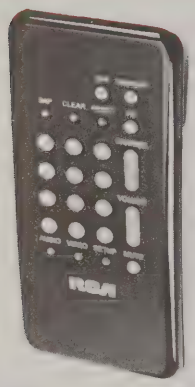

187987
CRK52B USE 200456

156532
CRK32A/C USE 159794

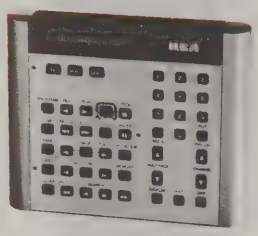

159794
CRK32E

159795
CRK35A

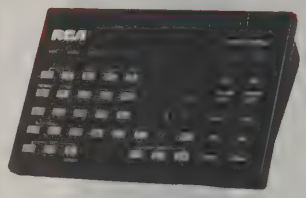

187551
CRK45G USE 226419

187550
CRK45F USE 226419

177994
CRK45A USE 226419

194677/197945
CRK55C/CRK55C
USE 197945

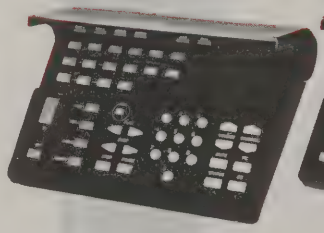

200458
CRK55R USE 198511

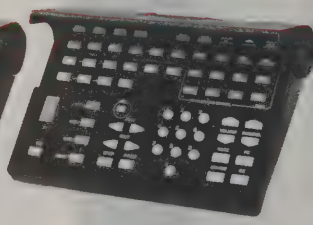

198511
CRK55N

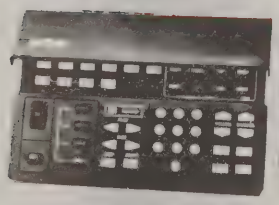

198512
CRK55P USE 197944

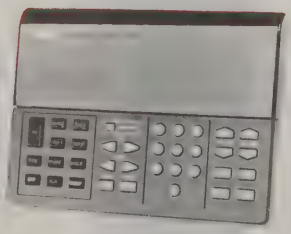

194676/197944
CRK55B/CRK55B
USE 197944

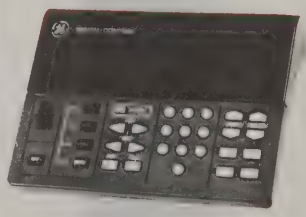

194678/197946
CRK55D/CRK55D
USE 197946

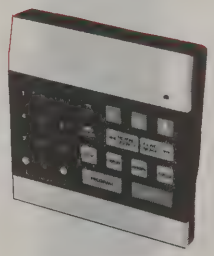

173301
5639974 USE 160829

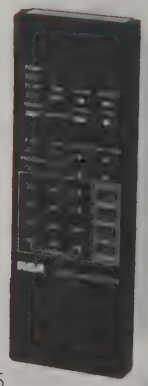

180105
5637261 USE 184800

182701
5618005 USE 184744

202543
5615221

211026
6450000010

192407
9099603115



186698
9099603107 USE 187896

187896
9099603102

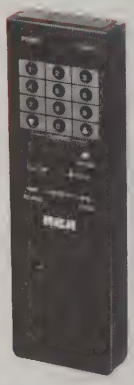

193024
9099603114

177423
5638831

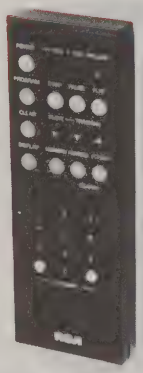

182879
5637574

197871
5614551

191379
5618621

211014
DXX1869

203538
VXX1421

202273
VXX1420

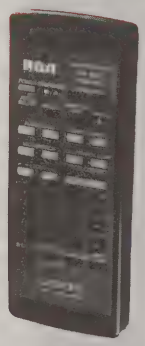

206821
VXX1580

211015
DXX1870

208545
VXX1582 USE 211016

211016
DXX1898

208546
VXX1581 USE 211017

211017
DXX1897

221297
VXX2084

221365
VXX2301

221368
VXX2302

210859
60445370 USE 234379

202153
5615061 USE 207089

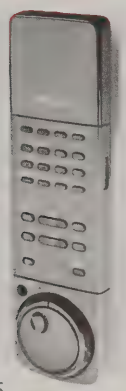

207135
5615622



207089
5615621

202236
VSQS0981

200724
5614867

200130
5614866 USE 201662

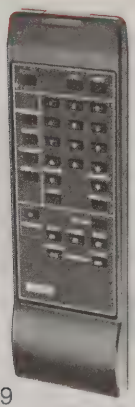

193029
5614442

193348
5614441 USE 193029

192188
5618752 USE 201662

192775
5618753

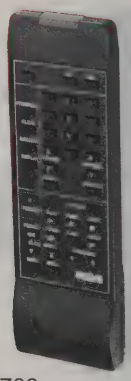

191783
5618754 USE 201662

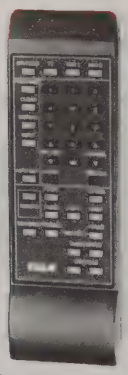

207133
5615572

196487
5614262

198044
5614264 USE 201662

191876
5618751

197403
5614263 USE 201662

200245
5614861

201662
5614865

201200
5614862 USE 196614

196614
5614261

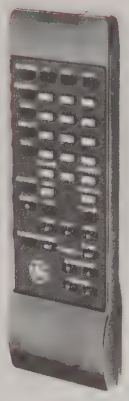

207086
5615573

194964
VSQS0791 USE 194963

194962
VSQS0793 USE 194963

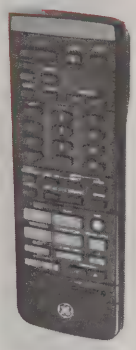

194963
VSQS0790

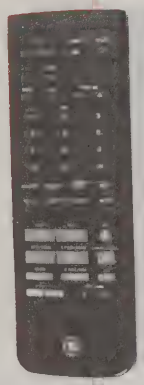

194692
VSQS0789

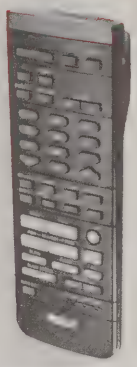

196305
VSQS0840

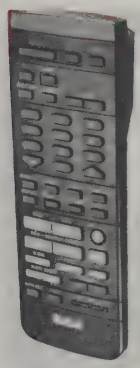

196367
VSQS0841

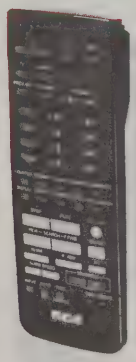

200065
VSQS0937

206024
VSQS1052

206812
VSQS1058

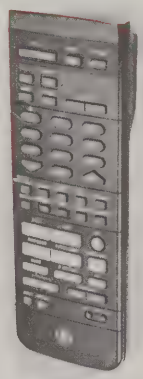

198514
VSQS0928

198515
VSQS0933 USE 206026

198535
VSQS0934

206026
VSQS1052

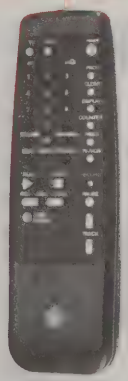

206040
9099609230

218853
RC3400N

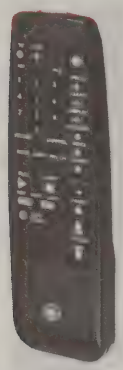

201173
9099609140

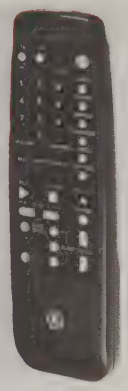

202498
9099609120

206031
9099609210



201168
9099609150

206028
9099609200 USE 206029

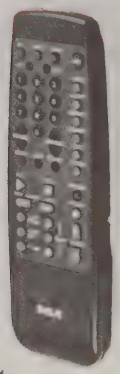

200711
9099609170 USE 206029

206029
9099609220

207087/
206350
10983400/VR680HF
USE 206350

206351
90543500

58A18205
RT2302RC01

EP62X0209

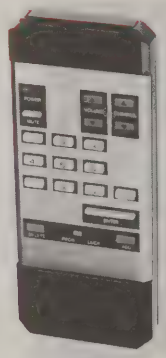

EP62X0208

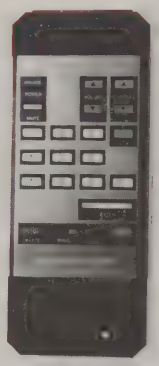

EP62X0235
73D235246001

EP62X0179
USE EP62X0207

EP62X0206
USE EP62X0208

EP62X0238

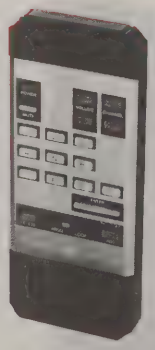

EP62X0207

EP62X0204

EP62X0232
73D235240001

EW62X0216/211792
EUR6456
USE 211878

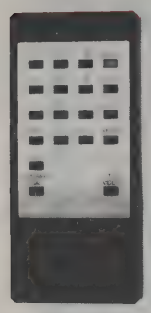

211878
EUR6457

EW62X0176/211829
105-031B
USE 211829

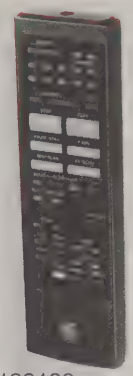

188142/188130
VSQS0553/VSQS0649
USE 188130

206799
CRK60A
USE 221245

206800
CRK60B

EW62X0264/211948
VSQS0549
USE 211948

58A20967
MF31TX

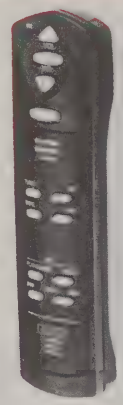

54001
54001

54003
54003

220294/
225436
4SRC4030C01A
USE 225436

232094
4SRC4050C01A

54022
4KT54022M01A

238535
4KRC4054C01A

240964
4KRC4067C01A

54002
4KT54002C01A

54055
4SCR4055K01A

54042
4SCR4042C01A

238536
4SRC4042C01A

239249
4KRC4066C01A

EA58X0001
7158913080

58A13968
7159302001

58A18708
715131A081

58A15481
7159302009

58A19754
AXD1293

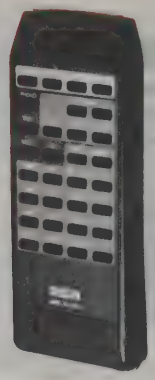

58A13499
RC120-10

58A16270
UREMT27SR019

58A15059
6142283653

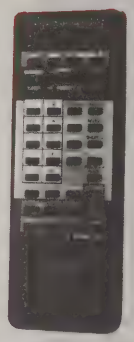

58A18340
R85416700

221750
715146T081

192949
9099606102

206027
9099606120

210846
9099624100 USE 218504



206030
9066906130

193000
9099606103

191395
VSQS0682 USE 190129

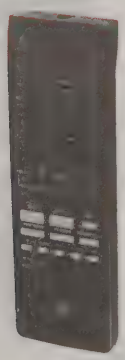

190129
VSQS0672

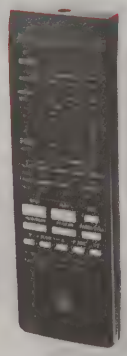

192018
VSQS0685

58A16603
RC41004

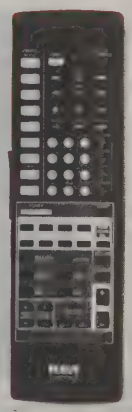

58A19186
AXD1293

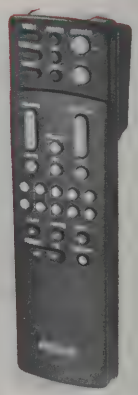

204605
CRK80A USE 224264

204602
CRK80D USE 212238

204603
CRK80C USE 224264

210826/
212238
CRK62F/CRK62F
USE 212238

212237
CRK62E USE 224265



212236
CRK62D
USE 224264



221143
CRK62J

205501/
212234
CRK62B/CRK62B3
USE 233063

210671/
212233
212236
USE 225841

216978
CRK62S

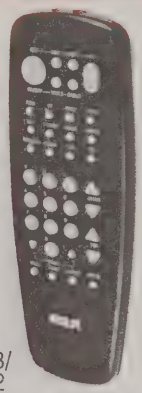

207873/
211682
CRK59B/CRK59B
USE 226419

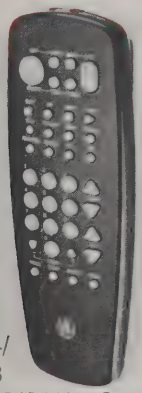

207874/
211683
CRK59C/CRK59C
USE 226419

207872/
211681
CRK59A/CRK59A
USE 226419

204940
CRK59G

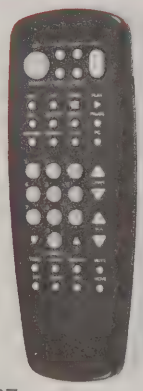

211687
CRK59L1 USE 226419

204944/
211686
CRK59I/CRK59I
USE 211686

218479
CRK59S

58A19107
0544380805

212471/226098
CRK57A1/CRK57A2
USE 226098

213725/226110
CRK63D1/CRK63D2
USE 226551

213724/226109
CRK63C1/CRK63C2
USE 227803

213722/226107
CRK63A1/CRK63A2
USE 226551

211690/
226102
CRK64C1/CRK64C2
USE 228006

211688/226100
CRK64A1/CRK64A2
USE 226100

211689/226101
CRK64B1/CRK64B2
USE 228006

213723
CRK63B1
USE 226108

218712
CRK66A1 USE 227834

218713
CRK66B1 USE 227835

217095
CRK91A1

221102
CRK91C1

226330
CRK91D1

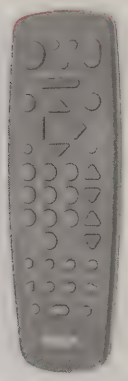

217094
CRK91B1

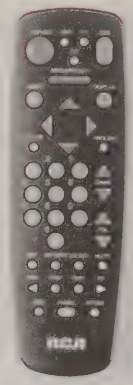

232672
CRK91FF1

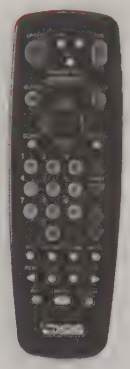

232674
CRK91HH1

232675
CRK91JJ1

232676
CRK91KK1

232677
CRK91LL1

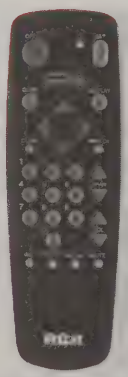

232110
CRK91M1

218499
CRK71D1
USE 221107

221107
CRK71C2

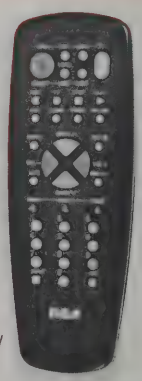

215420/
221106
CRK71B1/CRK71B2
USE 233065

215419
CRK71A1USE 233064

221133
CRK74B
USE 233065

221132/
233064
CRK74A2
USE 233064

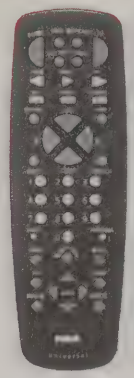

224262
CRK74F

233065
CRK74B2

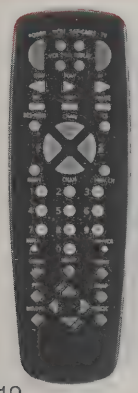

226419
CRK74R1

221112
CRK83A1

221113
CRK83B1

221114
CRK83C1



224264
CRK83D

224266
CRK83F1



231541
CRK83GL1

210848
9099622110

217650
VSQS1275B

218792
9099622170

219009
9099622210

219018
9099622230
USE 218504

218794
9099622220

221255
909962270

210856
11068360

210864
9099622130

221313
9099622310

218979
9099622240

218503
9099622190

218505
9099622180

218504/
210847/
210849
9099622200

213721
9099622150

218103
20119790

212933
5615615

212934
5615614

206884
5615612 USE 210850

207088
5615611

210850
9099622120

210857
20473000

221283
HL10281

218393
5615616

221256
9099622260

225290
20247010

221312
9099622300

221319
20309060

221282
9099622280

212934
5615614

212933
5615615

210858
5087810

210824
CRK82A1

216198
CRK82B1

217661
VSQS1274B

209739
VSQS1024

206025
VSQS1031



210789
VSQS1171 USE 210837

210837
VSQS1176

210790
VSQS1167B

210791
VSQS1168

210843
VSQS1210

218506
VSQS1218

218507
VSQS1217

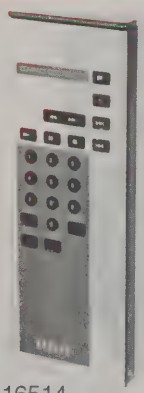

58A16514
2G21900504

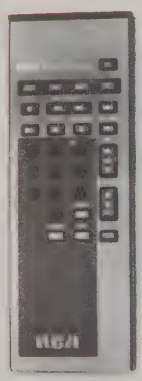

58A16512
2G21900502

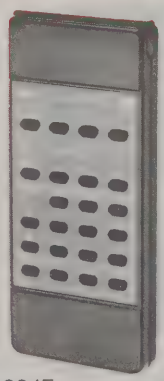

58A10047
7159130001

54015
54015

159935
5639822

161333
5638062 USE 164133

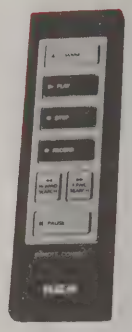

164133
5638063

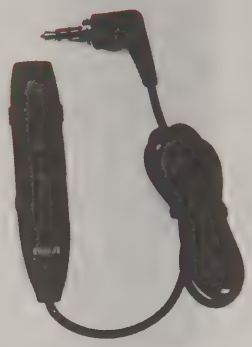

221579
6202193861

EW62X0160
VSQS0384

EW62X0051
VSQS0306

58A15475
P55TX

239226
HL10773

210842
XQ2059764

210921/222042
9063213707/20175310

201865
RC191

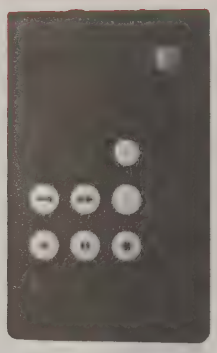

217012
YQ20691-3

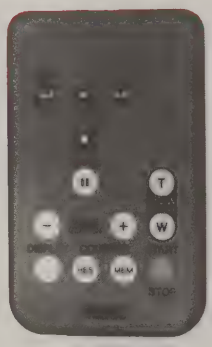

223234
6450049088

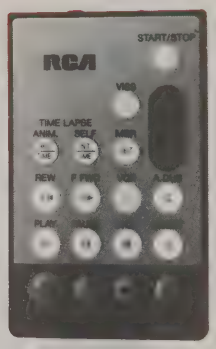

221185/
218537
YQ20710B-4 USE 218537

218501/224175
6450028649/6450040450
USE 224175

215769
5616353

218859
YQ20710D-4

211028
5616342

218502
5616355

220091
5616359

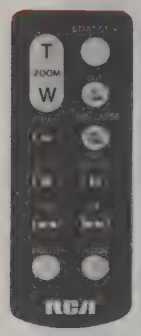

221125
YQ20767C

221363
HL10501

221337
YQ20775E-5

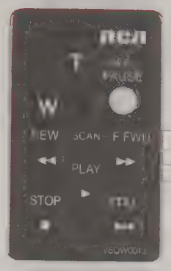

224594
VSQW0013

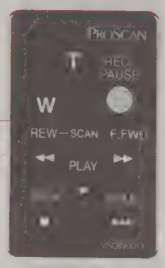

221285
VSQW0015

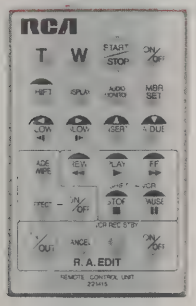

221415
YQ20922C-3

233195
6450177460

225814
7179016800

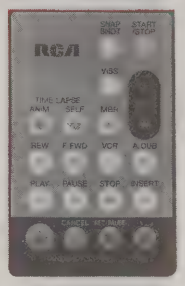

234383
YQ20775E-7

222042
AC59-12005R

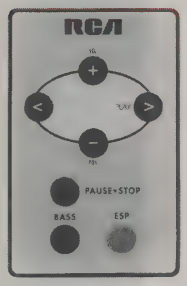

54057
176D8953

221387
AC59-12005Q

233717
YQ20932D

235827
RRMCG0052TASA

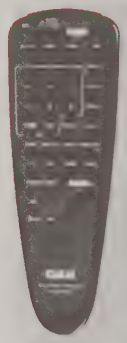

58A20049
6142375143

58A20304
6142394113



58A19553
RT2135RC01/
58A30577
RC0058RCA/
58A30616
4SRC4030C01A
USE 58A19553

216777
F1400036030

221342
9099627260

217495
6450024863

221949
715141T081

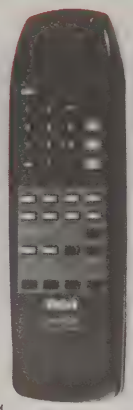

218791
912900050

221296
VXX2083

218232
VSQS1276

218744
VSQS1219

221291
VSQS1363

221347
VSQS1420

221276
VSQS1362



221290
VSQS1360

221373
VSQS1422

221345
VSQS1421

221348
VSQS1407

234011
VSQS1470

237931
VSQS1494

237698
VSQS1492

238513
VSQS1495

233148
VSQS1471

238510
VSQS1508

225291
VSQS1361

225760
F1400046020

221403
9099635300

218882
VSQS1306

221233
VSQS1375

221189
VSQS1320

221391
97P1R2B600

221359
RRMCG1139PESA

228892
RRMCG1140PESA

225375
4SRC5801TRUA

229652
97P1R2B601

233451
97P1R2BS00

233454
97P1R2BS01

218496
CRK60C1

221182
CRK62S2

221245
CRK61A1

221300
VSQS1363 USE 239260

221302
9099638102

221324
YQ20755A USE 232843


221325
20325980

221303
9099638101

225529
20234760

221301/
221386
HL10491 USE 239260

221402
20433450

234379
20601960

221382
20433440ZZ



221406
20552400ZZ

224266
CRK83F1

232306
CRK70N1

232311
VR674HF

232312
VR674HF

233026
CRK70Q1

233063
CRK70D2

238545
CRK83ML1

239259
20759350

239260
20759330

226551
CRK10A

227834
CRK10C1

227835
CRK10D1

227803
CRK10F

228007
CRK10G1W



228006
CRK10E1

235442
20572550

235443
CRK10B1

238435
20567090XX

238861
20683770

239040
20683780



239261
20761840

226725
CRK20A

224412
CRK66A2 USE 227834

224413
CRK66B2 USE 227835

233998
CRK67G1

221115
CRK70A

225838
CRK70D1 USE 233063

225839
CRK70E1

221321
CRK70VK

231544
CRK70VBL1 USE 239259

231545
CRK70VCL1 USE 239260

225841
CRK70G1



231546
CRK70VHL1

225617
CRK81A1

233066
CRK81BL1

212688/
221110
CRK72B/CRK72B2
USE 221109

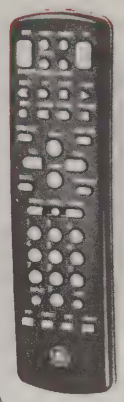

212687
CRK72A
USE 221109

221109
CRK72A2

228003
CRK84A1

228004
CRK84B1 USE 233067

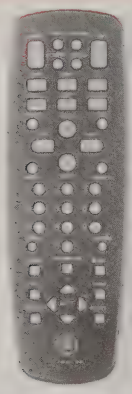

228005
CRK84C1 USE 233069

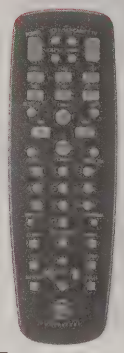

233067
CRK84A2

233068
CRK84B2

233069
CRK84C2

231536
CRK230A

232347
CRK230AW

221374
CRK231B

233544
CRK231C

233452
97P1R2DA00



233453
97P1R2FA00



233456
97P1R2FA01

232843
CRK83VBL1

224265
CRK83E

233581
RRMC610046TAZZ

233583
20590150ZZ

231032
CRK20A1W

221426
9099627300

221371
20501560

239271
HL00691



230766
48B2133B02

233055
UREMT27SR027

237001
VEQ1917

237697
RRMCG0033TASA

238905
CRK93H1

NOTES

Remote Controls Type Number Cross Reference

TYPE NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
0544380805	58A19107	AUDIO	45
105-031B	211829	TV	43
11068360	210856	VCR	47
176D8953	54057	AUDIO	51
1813579	58A13499	AUDIO	49
20119790	218103	VCR	48
20234760	225529	VCR	53
20234770	221300	VCR	53
20247010	225290	VCR	48
20433440ZZ	221382	VCR	54
20473000	210857	VCR	48
20552390ZZ	221405	VCR	NO PIX
20552400ZZ	221406	VCR	54
2056709XX	238435	AUDIO	55
20309060	221319	VCR	48
20325980	221325	VCR	53
20433450	221402	VCR	54
20501560	221371	TV/VCR	57
20572550	235442	TV/VCR	55
20590150	233583	VCR	56
20601960	234379	VCR	54
20683770	238861	VCR	55
20683780	239040	VCR	55
20701840	239261	VCR	55
20759330	239260	VCR	54
20759350	239259	VCR	54
2G21900502	58A16512	AUDIO	49
2G21900504	58A16514	AUDIO	49
48B2133B02	230766	TV	57
4KRC4054C01A	238535	AUDIO	43
4KRC4054C01A	54054	AUDIO	NO PIX
4KRC4066C01A	239249	AUDIO	43
4KRC4067C01A	240964	AUDIO	43
4KT54001C01A	54001	AUDIO	43
4KT54002C01A	54002	AUDIO	43
4KT54005T01A	58A21208	AUDIO	NO PIX
4KT54022M01A	54022	AUDIO	NO PIX
4SRC4030C01A	220294	AUDIO	43
4SRC4030C01AGE	58A30616	AUDIO	51
4SRC4030T01A	225436	AUDIO	43
4SRC4042C01A	54042	AUDIO	43
4SRC4042C01A	238536	AUDIO	43
4SRC4050C01A	232094	AUDIO	43
4SRC4055K01A	54055	AUDIO	43
4SRC4055K01A	58A26322	AUDIO	NO PIX
4SRC5801TRUA	225375	AUDIO	53
50878710	210858	VCR	49
54001	54001	AUDIO	43
54003	54003	AUDIO	43
54015	54015	TV	49
5614261	196614	VCR	41
5614262	196487	VCR	40
5614263	197403	VCR	40
5614264	198044	VCR	40
5614441	193348	VCR	40
5614442	193029	VCR	40
5614443	191876	VCR	40
5614444	192775	VCR	40
5614551	197871	VCR	39
5614861	200245	VCR	41
5614862	201200	VCR	41
5614865	201662	VCR	41
5614866	200130	VCR	40
5614867	200724	VCR	40
5615061	202153	VCR	40
5615221	202543	VCR	39
5615572	207133	VCR	40
5615573	207086	VCR	41
5615611	207088	VCR	48
5615612	206884	VCR	48
5615614	212934	VCR	48
5615615	212933	VCR	48
5615616	218393	VCR	48
5615621	207089	VCR	40
5615622	207135	VCR	40
5616342	211028	CAM	50
5616353	215769	CAM	50
5616355	218502	CAM	50
5616359	220091	CAM	50
5618005	182701	VCR	39
5618621	191379	VCR	39
5618752	192188	VCR	40
5618754	191783	VCR	40
5637261	180105	VCR	38
5637574	182879	VCR	39
5638063	164133	VCR	50
5638831	177423	VCR	39
5639743	156767	VCR	36
5639822	159935	VCR	50
5639974	173301	VCR	38
5639981	160551	VCR	36
60412595	206350	VCR	42
60445370	210859	VCR	40
6142283653	58A15059	AUDIO	44
6142375143	58A20049	AUDIO	51
6142394113	58A20304	AUDIO	51
6202193861	221579	AUDIO	50
6450000010	211026	CAM	39
6450024863	217495	CAM	51
6450028649	218501	CAM	50
6450040450	224175	CAM	50
6450049088	223234	CAM	50
6450177460	233195	CAM	51
7031321	160534	VCR	36
7031322	173582	VCR	36
715131A081	58A18708	AUDIO	44

Remote Controls Type Number Cross Reference

TYPE NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
715131T081	58A19754	AUDIO	44
715141T081	221949	AUDIO	52
715146T081	221750	AUDIO	44
7158913080	EA58X0001	AUDIO	43
7159130001	58A10047	AUDIO	49
7159302001	58A13968	AUDIO	44
7159302009	58A15481	AUDIO	44
7179014300	222042	CAM	51
7179016800	225814	CAM	51
73D225603GR16	EP62X0200	TV	35
73D235012G01	EP62X0204	TV	42
73D235016G01	EP62X0238	TV	42
73D235018G01	EP62X0207	TV	42
73D235019G01	EP62X0208	TV	42
73D235020G01	EP62X0209	TV	42
73D235240001	EP62X0232	TV	42
73D235246001	EP62X0235	TV	42
8685.13	194328	TV	35
8693.13	194324	TV	35
8929.13	194323	TV	35
90543500	206351	VCR	42
9063213707	210921	CAM	50
9099603102	187896	VCR	39
9099603107	186698	VCR	39
9099603114	193024	VCR	39
9099603115	192407	VCR	39
9099606102	192949	VCR	44
9099606103	193000	VCR	44
9099606120	206027	VCR	44
9099606130	206030	VCR	44
9099609120	202498	VCR	42
9099609140	201173	VCR	42
9099609150	201168	VCR	42
9099609170	200711	VCR	42
9099609200	206028	VCR	42
9099609210	206031	VCR	42
9099609220	206029	VCR	42
9099609230	206040	VCR	41
9099622100	210849	VCR	48
9099622110	210848	VCR	47
9099622120	210850	VCR	48
9099622130	210864	VCR	48
9099622140	210847	VCR	48
9099622150	213721	VCR	48
9099622170	218792	VCR	47
9099622180	218505	VCR	48
9099622190	218503	VCR	48
9099622200	218504	VCR	48
9099622210	219009	VCR	47
9099622220	218794	VCR	47
9099622230	219018	VCR	47
9099622240	218979	VCR	48
9099622260	221256	VCR	48
9099622270	221255	VCR	47
9099622280	221282	VCR	49
9099622300	221312	VCR	48
9099622310	221313	VCR	48
9099624100	210846	VCR	44
9099635300	221403	VCR	53
9099638100	221301	VCR	54
9099638101	221303	VCR	53
9099638102	221302	VCR	53
9099622300	221312	VCR	48
9099622310	221313	VCR	48
9099627260	221342	VCR	51
9099627300	221426	VCR	57
9099635300	221403	VCR	53
9129-0005-00	218791	VDISC	52
97P1R2B600	221391	VCR	53
97P1R2B601	229652	VCR	53
97P1R2BS00	233451	VCR	53
97P1R2BS01	233454	VCR	53
97P1R2DA00	233452	VCR	56
97P1R2FA00	233453	VCR	56
97P1R2FA01	233456	VCR	56
AC59-12005Q	221387	VCR	51
AC59-12005R	222042	VCR	51
AXD1293	58A19186	AUDIO	44
CRK10A	226551	TV	54
CRK10B1	226552	TV	NO PIX
CRK10B1	235443	TV	55
CRK10C1	227834	TV	54
CRK10D	227835	TV	54
CRK10E1	228006	TV	54
CRK10F	227803	TV	54
CRK10G1W	228007	TV	54
CRK19B	143365	TV	35
CRK200B	221348	TV/VCR	52
CRK20A1	226725	TV	55
CRK20A1W	231032	TV	57
CRK20B1	226726	TV	NO PIX
CRK20B1W	231033	TV	NO PIX
CRK22A	188206	TV	35
CRK230A	231536	TV/VCR	56
CRK230AW	232347	TV/VCR	56
CRK230B	221371	TV	57
CRK230CL	233543	TV	NO PIX
CRK231B	221374	TV	56
CRK231C	233544	TV	56
CRK24E	143725	TV	35
CRK260B	228892	TV/VCR	53
CRK261B	221359	TV	53
CRK26E	194330	TV	35
CRK28C	199512	TV	36
CRK28J	159930	TV	36
CRK29D	199500	TV	35

Remote Controls Type Number Cross Reference

TYPE NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
CRK29H	156516	TV	36
CRK32E	159794	TV	38
CRK35A	159795	TV	38
CRK37B	159802	TV	36
CRK39J	173915	TV	NO PIX
CRK39K	173916	TV	36
CRK39T	181044	TV	36
CRK39U	182727	TV	36
CRK39Z	194427	TV	36
CRK40B	180339	TV	37
CRK45A	177994	TV	38
CRK45F	187550	TV	38
CRK49A	180394	TV	NO PIX
CRK49D	181045	TV	37
CRK49E	183496	TV	37
CRK50A	179472	TV	38
CRK50B	180393	TV	37
CRK50C	187803	TV	37
CRK50E	192551	TV	38
CRK50G	196437	TV	38
CRK50K	207136	TV	37
CRK52A	187986	TV	38
CRK52B	187987	TV	38
CRK52H	200456	TV	38
CRK53A	186343	TV	37
CRK53B	186344	TV	37
CRK53C	186345	TV	37
CRK53D	192108	TV	37
CRK53K	197031	TV	37
CRK53M	250099	TV	37
CRK53P	250097	TV	37
CRK53Q	204960	TV	37
CRK55B	197944	TV	38
CRK55C	197945	TV	38
CRK55D	197946	TV	38
CRK55N	198511	TV	38
CRK55P	198512	TV	38
CRK55R	200458	TV	38
CRK57A1	212471	TV	45
CRK57A2	226098	TV	45
CRK59A	211681	TV	45
CRK59B	211682	TV	45
CRK59C	207874	TV	45
CRK59G	204940	TV	45
CRK59I	211686	TV	45
CRK59L1	211687	TV	45
CRK60A	206799	TV	43
CRK60B	206800	TV	43
CRK60C1	218496	TV	53
CRK61A1	221245	TV	53
CRK62A2	212233	TV	45
CRK62B	205501	TV	45
CRK62B3	212234	TV	45
CRK62D	212236	TV	45
CRK62E	212237	TV	45
CRK62F	212238	TV	45
CRK62J1	221143	TV	45
CRK62S	216978	AUDIO	45
CRK62S2	221182	TV	53
CRK63A1	213722	TV	46
CRK63A2	226107	TV	46
CRK63B1	213723	TV	46
CRK63B2	226108	TV	46
CRK63C1	213724	TV	45
CRK63C2	226109	TV	45
CRK63D1	213725	TV	45
CRK63D2	226110	TV	45
CRK64A1	211688	TV	46
CRK64A2	226100	TV	46
CRK64B1	211689	TV	46
CRK64B2	226101	TV	46
CRK64C1	211690	TV	46
CRK64C2	226102	TV	46
CRK66A1	218712	TV	46
CRK66A2	224412	TV	55
CRK66B1	218713	TV	46
CRK66B2	224413	TV	55
CRK67G1	233998	AUDIO	55
CRK70A1	221115	TV	55
CRK70D1	225838	TV	55
CRK70D2	233063	TV	54
CRK70E1	225839	TV	55
CRK70G	225841	TV	55
CRK70N1	232306	TV	54
CRK70Q1	233026	TV	54
CRK70R1	236583	TV	NO PIX
CRK70VBL1	231544	VCR	55
CRK70VCL1	231545	VCR	55
CRK70VHL1	231546	VCR	55
CRK70VK	221321	VCR	55
CRK71A1	215419	TV	47
CRK71B1	215420	TV	46
CRK71B2	221106	TV	46
CRK71C2	221107	TV	46
CRK71D1	218499	TV	46
CRK72A	212687	TV	56
CRK72A2	221109	TV	56
CRK72B1	212688	TV	56
CRK72B2	221110	TV	56
CRK74A1	221132	TV	47
CRK74B1	221133	TV	47
CRK74B2	233065	TV	47
CRK74F1	224262	TV	47
CRK74R1	226419	TV	47
CRK80A	204605	TV	44
CRK80C	204603	TV	45

Remote Controls Type Number Cross Reference

TYPE NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
CRK80D	204602	TV	45
CRK81A1	225617	TV	55
CRK81BL1	233066	TV	54
CRK82A1	210824	TV	49
CRK82B1	216198	TV	49
CRK83A1	221112	TV	47
CRK83B1	221113	TV	47
CRK83C1	221114	TV	47
CRK83D1	224264	TV	47
CRK83E1	224265	TV	56
CRK83F1	224266	TV	47
CRK83GL1	231541	TV	47
CRK83J1	233848	TV	NO PIX
CRK83KL1	236123	TV	NO PIX
CRK83ML1	238545	TV	54
CRK83PL1	233997	DVD	NO PIX
CRK83VBL1	232843	VCR	56
CRK84A1	228003	TV	56
CRK84A2	233067	TV	56
CRK84B1	228004	TV	56
CRK84B2	233068	TV	56
CRK84C	228005	TV	56
CRK84C2	233069	TV	56
CRK91A1	217095	DSS	46
CRK91B1	217094	DSS	46
CRK91C1	221102	DSS	46
CRK91D1	226330	DSS	46
CRK91FF1	232672	DSS	46
CRK91JJ1	232675	DSS	46
CRK91KK1	232676	DSS	46
CRK91LL1	232677	DSS	46
CRK91M1	232110	DSS	46
CRK93H1	238905	TV	57
CRKCPC	194584	TV	37
CRKCPD	198536	TV	37
CRKCPE	198537	TV	37
CRKCPG	206012	TV	37
CRKCPH	210491	TV	37
CRKCPK	210492	TV	37
DXX1869	211014	AUDIO	39
DXX1870	211015	AUDIO	39
DXX1897	211017	AUDIO	39
DXX1898	211016	AUDIO	39
EUR6456	211792	TV	42
F14-00036-030	216777	TV/VCR	51
F14-00046-020	225760	TV/VCR	52
HL00691	239271	MONITOR	57
HL10281	221283	VCR	48
HL10491	221386	VCR	54
HL10501	221363	CAM	51
HL10773	239226	VCR	50
MF31TX	58A20967	AUDIO	43
P55TX	58A15475	AUDIO	50
R85416700	58A18340	AUDIO	44
RC0058RCA	58A30577	AUDIO	51
RC191	201865	TV	50
RC3400N	218853	AUDIO	41
RC4100L	58A16603	AUDIO	44
RRMCG0033TASA	237697	VCR	57
RRMCG0046TAZZ	233581	CAM	56
RRMCG0052TASA	235827	VCR	51
RT2135RC01	58A19553	AUDIO	51
RT2302RC01	58A18205	AUDIO	42
TUX6	EA58X0002	AUDIO	43
UREMT27SR0	58A16270	AUDIO	44
UREMT27SR027	233055	AUDIO	57
VEQ1917	237001	DVD	57
VR674HF	232311	VCR	54
VR674HF	232312	VCR	54
VSQS0306	EW62X0051	VCR	50
VSQS0384	EW62X0160	VCR	50
VSQS0549	211948	VCR	43
VSQS0553	188142	VCR	43
VSQS0649	188130	VCR	43
VSQS0672	190129	VCR	44
VSQS0682	191395	VCR	44
VSQS0685	192018	VCR	44
VSQS0789	194692	VCR	41
VSQS0790	194963	VCR	41
VSQS0791	194964	VCR	41
VSQS0793	194962	VCR	41
VSQS0840	196305	VCR	41
VSQS0841	196367	VCR	41
VSQS0928	198514	VCR	41
VSQS0933	198515	VCR	41
VSQS0934	198535	VCR	41
VSQS0937	200065	VCR	41
VSQS1024	209739	VCR	49
VSQS1031	206025	VCR	49
VSQS1052	206026	VCR	41
VSQS1053	206024	VCR	41
VSQS1057	206812	VCR	41
VSQS1167B	210790	VCR	49
VSQS1168	210791	VCR	49
VSQS1171	210789	VCR	49
VSQS1176	210837	VCR	49
VSQS1210	210843	VCR	49
VSQS1217	218507	VCR	49
VSQS1218	218506	VCR	49
VSQS1219	218744	VCR	52
VSQS1274	217661	VCR	49
VSQS1275B	217650	VCR	47
VSQS1276	218232	VCR	52
VSQS1306	218882	TV/VCR	53
VSQS1320	221189	TV/VCR	53
VSQS1360	221290	VCR	52

Remote Controls Type Number Cross Reference

TYPE NUMBER	STOCK NUMBER	USED WITH	PAGE NUMBER
VSQS1361	225291	VCR	52
VSQS1362	221276	VCR	52
VSQS1363	221291	VCR	52
VSQS1375	221233	TV/VCR	53
VSQS1420	221347	VCR	52
VSQS1421	221345	VCR	52
VSQS1422	221373	VCR	52
VSQS1470	234011	VCR	52
VSQS1471	233148	VCR	52
VSQS1492	237698	VCR	52
VSQS1494	237931	VCR	52
VSQS1495	238513	VCR	52
VSQS1508	238510	VCR	52
VSQW0013	224594	CAM	51
VSQW0015	221285	CAM	51
VXX1420	202273	VDISC	39
VXX1421	203538	AUDIO	39
VXX1580	206821	AUDIO	39
VXX1581	208546	AUDIO	39
VXX1582	208545	AUDIO	39
VXX2083	221296	VDISC	52
VXX2301	221365	VCR	40
VXX2302	221368	VCR	40
YQ2059764	210842	CAM	50
YQ20691-3	217012	CAM	50
YQ20710B-4	218537	CAM	50
YQ20710D-4	218859	CAM	50
YQ20755A	221324	VCR	53
YQ20767C	221125	CAM	51
YQ20775E-5	221337	CAM	51
YQ20775E-7	234383	VCR	51
YQ20922C3	221415	CAM	51

NOTES

THOMSON CONSUMER ELECTRONICS

1F5790
Rev.
3/98